




## LIST OF SPARE PARTS SUPER TRAD 350 SO

### BEDPLATE ASSEMBLY

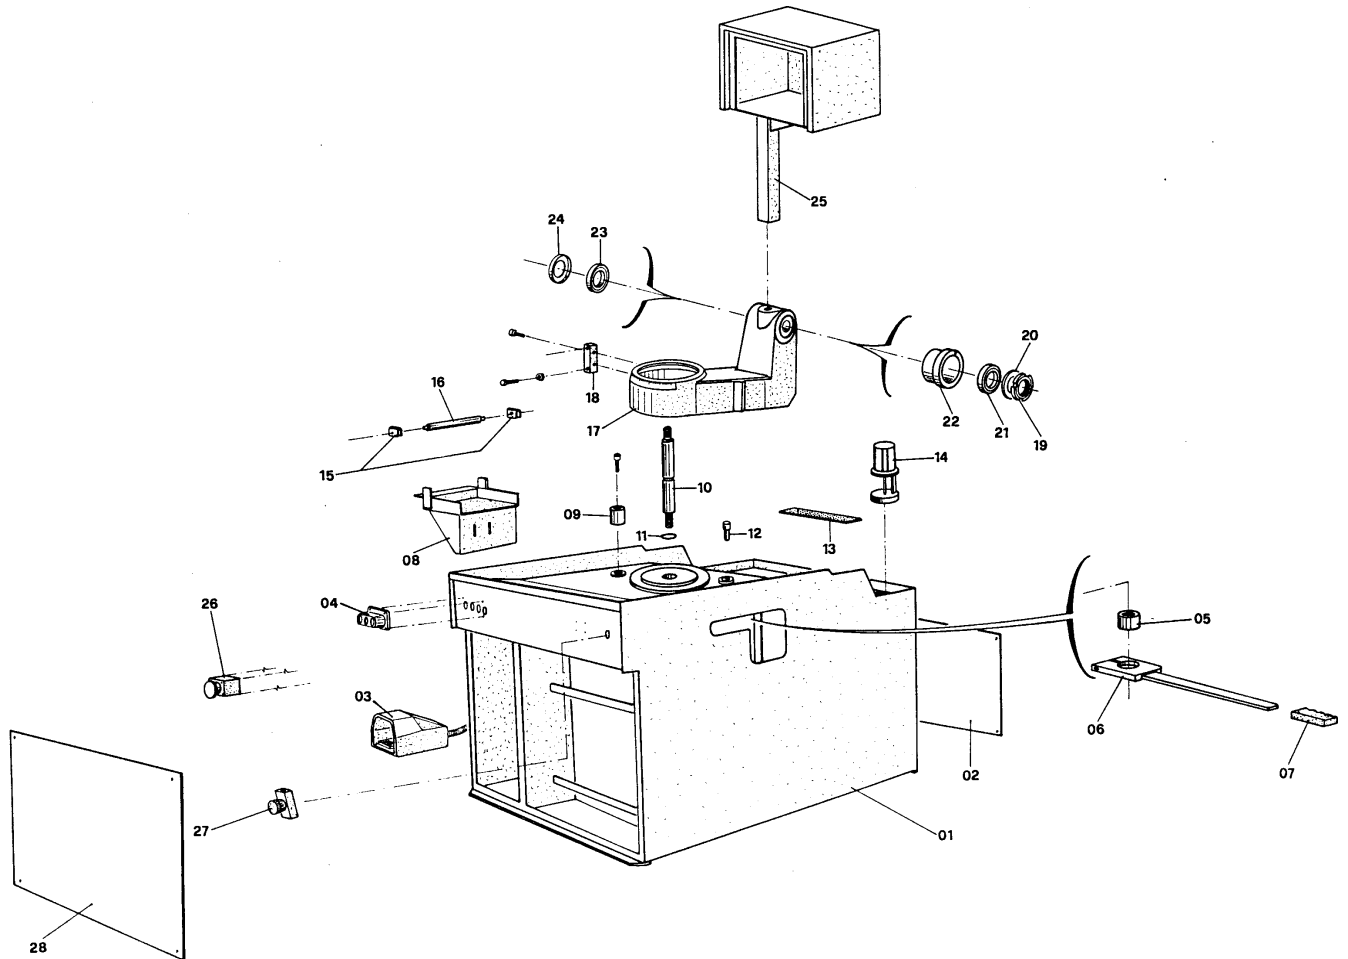

REF.NR.	DESCRIPTION	CODE
---------	-------------	------


01	Bedplate .....	010A0001
02	Hydraulic unit guard .....	160A0004
03	Start cycle foot-control ..	73901000
04	3-Way junction box .....	170E0013
05	Arm lock bush .....	AFB80012
06	Arm lock lever .....	120A0001
07	Handgrip .....	ANA40023
08	Roller arm .....	E20A0005
09		
10	Roller arm pin .....	AFA40019
11	OR ring 4081 .....	86002004
12	Pin .....	060A0004
13	Crucible .....	180A0005
14	Pump .....	88140002

REF.NR.	DESCRIPTION	CODE
---------	-------------	------

15	Roller holder .....	49100010
16	Roller .....	49001001
17	Arm .....	020A0001
18		
19	Guk ring nut M45 .....	81700045
20	NILOS ring .....	86005005
21	Bearing 32009X .....	84320039
22	Eccentric bush .....	080A0003
23	Bearing 32010X .....	84320047
24	Nilos ring 32010 .....	86005005
25	Electric box .....	170E0011
26	Emergency push-button ..	70101000
27	Speed regulator .....	88900003
28	Electric unit guard .....	160A0005




## SAW-FRAME ASSEMBLY

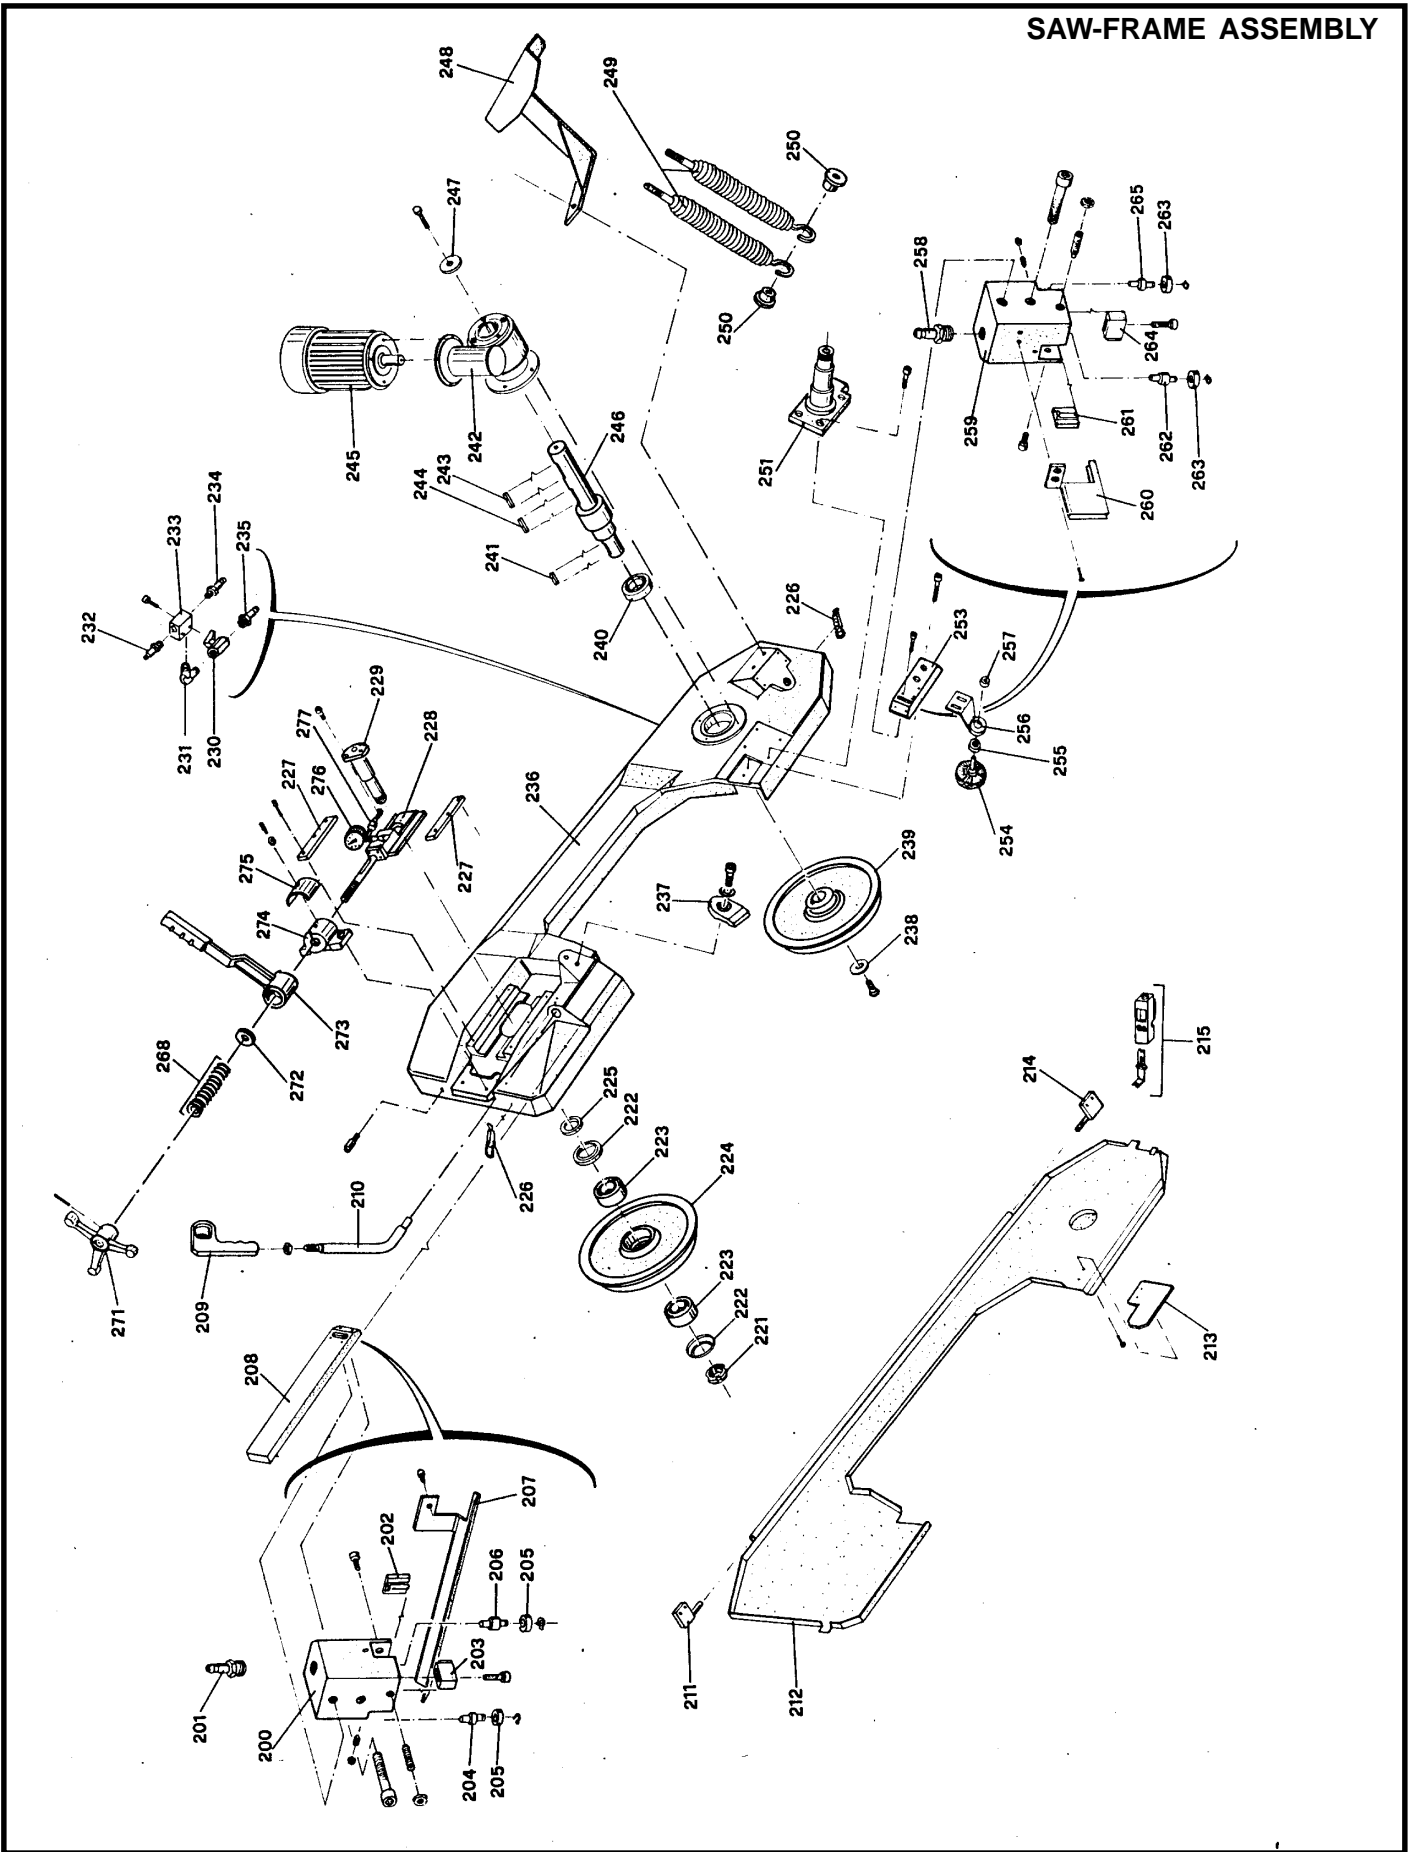




### VICE ASSEMBLY

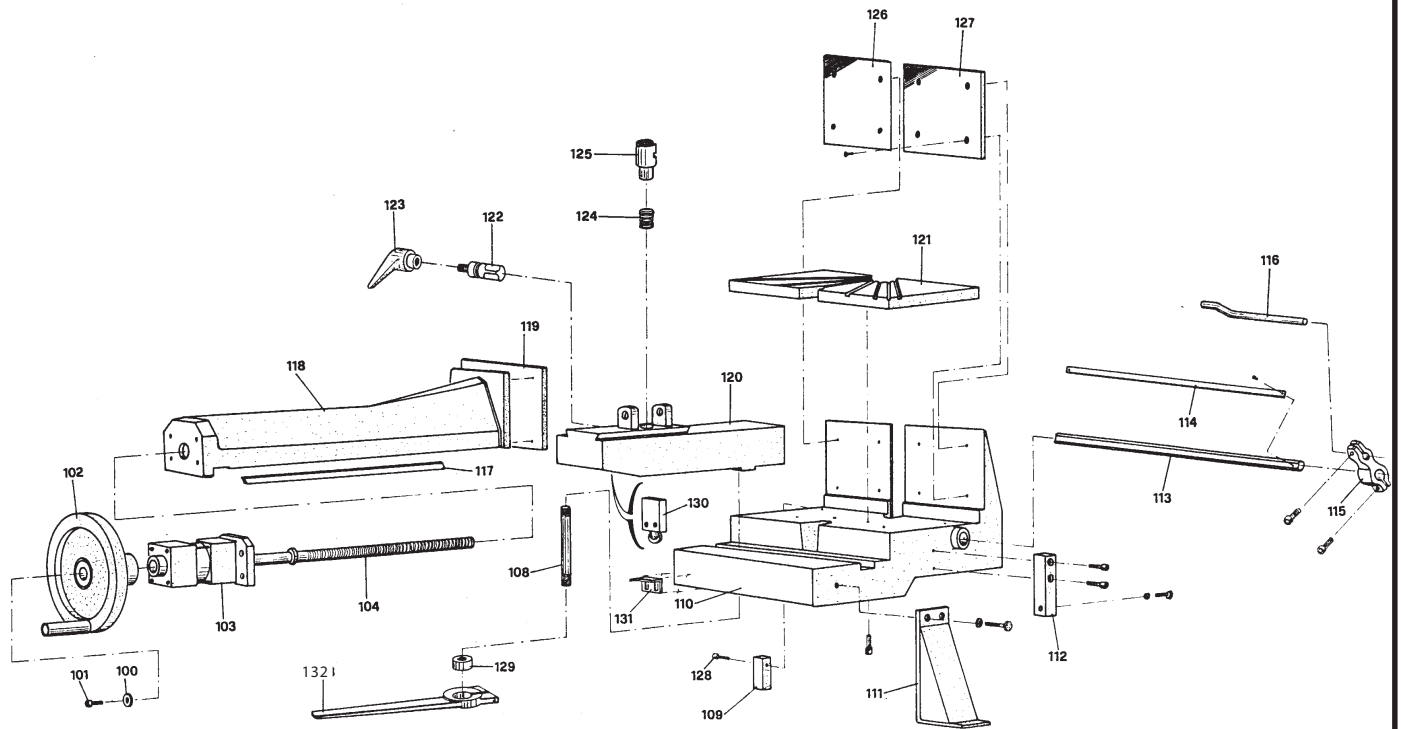


REF.NR.	DESCRIPTION	CODE
100	Washer .....	8210000
101	Screw TCCE M8 .....	81110080
102	Vice handwheel .....	44116418
103	Vice cylinder .....	78100051
104	Vice screw .....	060G0003
105		
108	Vice lock pin .....	060B0005
109		
110	Countervice .....	050B0002
111	Square .....	110A0002
112		
113	Bar stop rod .....	AFB80024
114	Scale .....	AHB80026
115	Bar stop body .....	AG660047
116	Bar stop push-rod ...	AFC40109
117	Vice gib .....	140B0001

REF.NR.	DESCRIPTION	CODE
118	Vice .....	050B0001
119	Vice jaw .....	130B0001
120	Vice holder .....	050B0003
121	Interchangeable plate ..	050B0004
122	Block pin .....	060B0004
123	Handle .....	46112000
124	Spring .....	190B0001
125	Block .....	060B0002
126	Countervice left jaw .....	130B0003
127	Countervice right jaw ...	130B0002
128		
129	Bush .....	AFB80012
130	Microswitch .....	72212000
131	Microswitch square .....	110B0002
132.1	Vice locking lever .....	AG160022

### SAW-FRAME CYLINDER ASSEMBLY

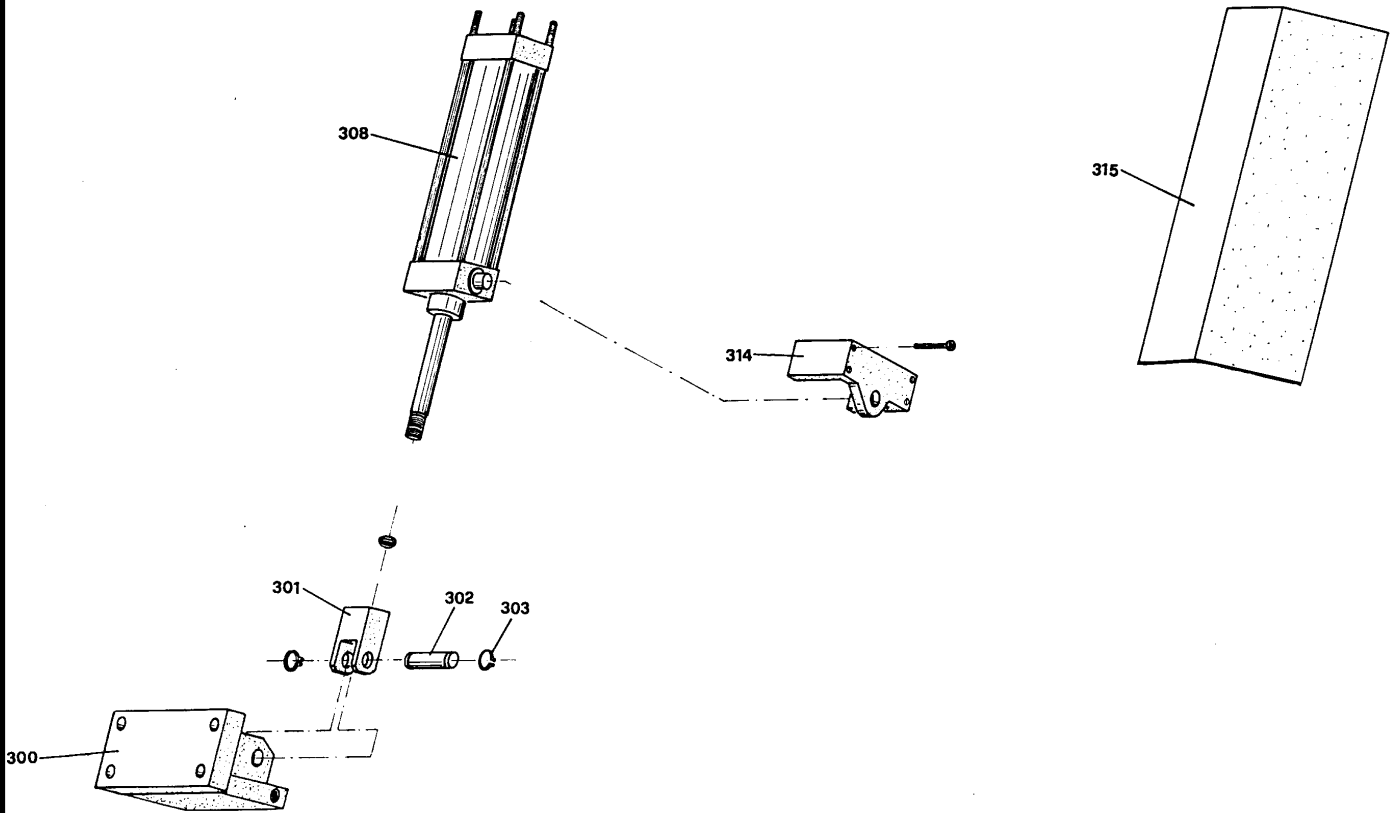

### SAW-FRAME STROKE ADJUSTMENT ASSEMBLY

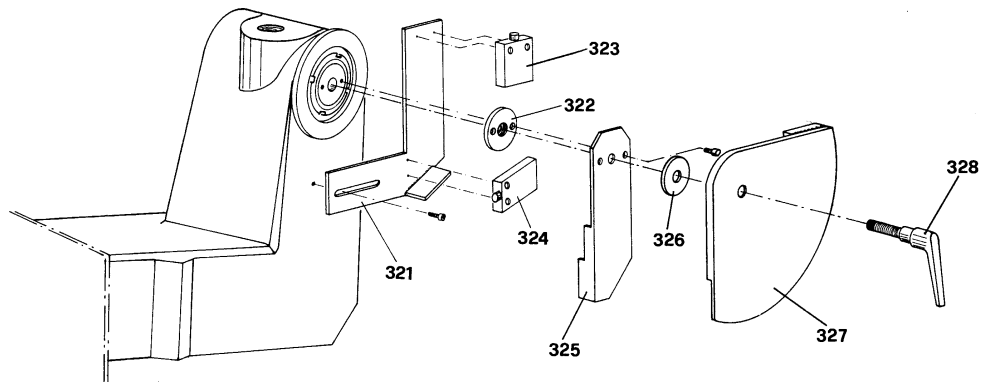


REF.NR.	DESCRIPTION	CODE
300	Front bracket.....	110A0001
301	Cylinder fork.....	110H0006
302	Fork pin.....	AF880080
303	Seeger ring Ø 20.....	82600000
308	Cylinder.....	200H0002
314	Cylinder bracket.....	110C0001
315	Cylinder guard.....	160H0002

REF.NR.	DESCRIPTION	CODE
321	Microswitch hold plate .	110H0010
322	Bush.....	080H0001
323	Microswitch.....	72212000
324	Microswitch.....	72212000
325	Plate for saw-fr.low pos.	110H0009
326	Washer.....	82100000
327	Plate for saw-fr.up. pos.	110H0008
328	Handle.....	46108000


### KEY

- 450 TC transformer
- 451 Auxiliary relay
- 452 KM1 remote control switch
- 453 KM2 remote control switch
- 454 Auxiliary relay
- 455 KA1 auxiliary relay
- 456 KA2 auxiliary relay
- 457 KA3 auxiliary relay
- 458 KA4 auxiliary relay
- 459 KA5 auxiliary relay
- 460 FRI thermal relay
- 461 KT timer
- 462 KT timer
- 463 Fuse holder
- 464 Fuse holder

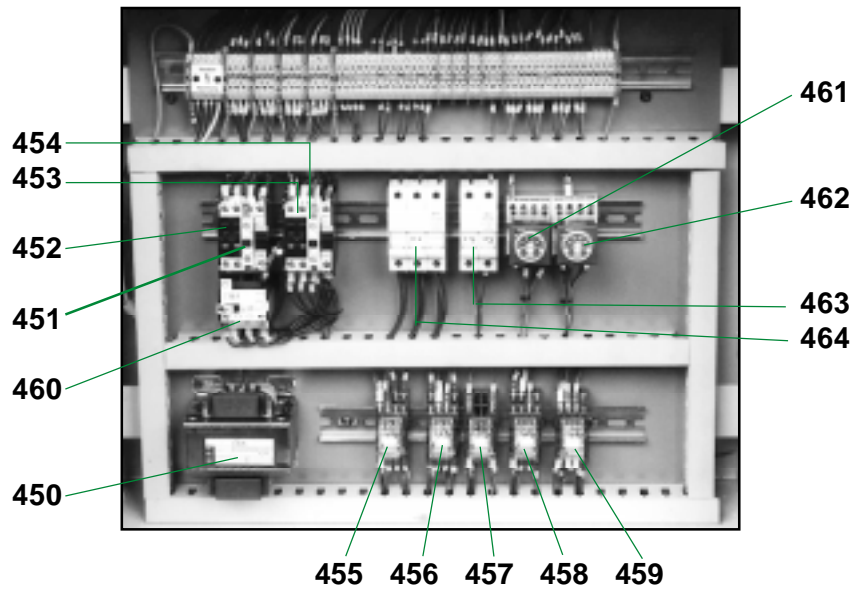

### KEY

- 401 Main switch
- 402 Start push-button
- 403 Speed switch
- 404 Saw-frame selector
- 405 Start push-button

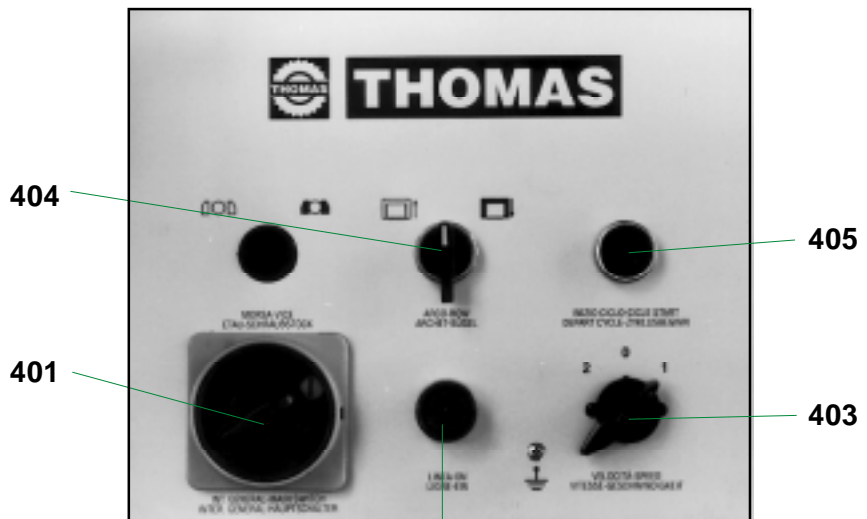

### KEY

- 501 Vice hydraulic solenoid valve
- 502 Saw-frame hydraulic solenoid valve
- 503 Hydraulic unit oil level
- 504 Pressure gauge
- 505 Hydraulic unit motor

