



10 MACHINE COMPONENTS


10.1 - List of spare parts


PART NUMBER	DESCRIPTION
1	Base
2	Arm locking lover
3	Bush
4	Rear protection
5	Roller support
6	Roller
7	Crucible
8	Electropump
9	Pivot
10	Bearing 51105
11	Bush
12	Hinge Pivot
13	Bearing 32007 X
14	Ring NILOS 32007 XAV
15	Excentric bush
16	Bearing 32007 X
17	Ring Nilos 32007 XAV
18	Ring nut GUK 35
19	Left jaw support
20	Right jaw support
21	Rotation plate
22	Right countervice jaw
23	Left countervice jaw
24	Vice jaw
25	Vice
26	
27	
28	
29	Leadnut
30	Spring
31	Vice gib
32	Vice support
33	Pin
34	Bush
35	Vice level
36	Handle
37	Pin
38	
39	
40	
41	
42	
43	Bar stop rod
44	Bar stop pointer
45	Bar stop body
46	Bracket
47	spring bush
48	Cylinder fork
49	Pin
50	Handle

PART NUMBER	DESCRIPTION
51	Plate
52	Washer
53	Plate
54	Microswitch plate
55	Limit switch DW
56	Limit switch UP
60	Splash protection
61	Electric box
62	Vice cylinder
63	Vice handwheel
64	Vice thread
65	Saw frame cylinder
66	Saw frame spring
70	Rear part of the sawframe
71	Front part of the sawframe
72	Blade tension plate
73	Pivot
74	Blade tension Microswitch
75	Microswitch supporting plate
76	Blade tension guide
77	Blade tension pin
78	Springs
79	Blade tension handwheel
80	Lever
81	Handgripp
82	Ring Nilos 32006 XAV
83	Spacer ring
84	Bearing 32006 X
85	Return flywheel
86	Ring nut Guk M 35
87	Screw TE M 12
88	Washer
89	Motor flywheel
90	Bearing 6208 2RS
91	Wrench
92	Wrench
93	Pivot
94	Reduction unit
95	Electric motor
96	Plate
97	Screw TE M 12
98	Bush
99	Plate




PART NUMBER	DESCRIPTION
100.....	Coolant distributor
101.....	Connection
102.....	Coolant tap
103.....	Connection
104.....	Microswitch
105.....	Knob
106.....	Cover
107.....	Handle
108.....	Plate
109.....	Connection
110.....	Blade-guide rod
111.....	Short eccentric pin
112.....	Long eccentric pin
113.....	Bearing 608 2RS
114.....	Blade-guide protection
115.....	Fixed blade-guide pad
116.....	Mobile blade-guide pad
117.....	Mobile blade-guide block
118.....	Blade protection
119.....	Fixed blade-guide block
120.....	Blade-guide rod
132.....	Foot control switch
133.....	Spray gun
134.....	Flexible pipe

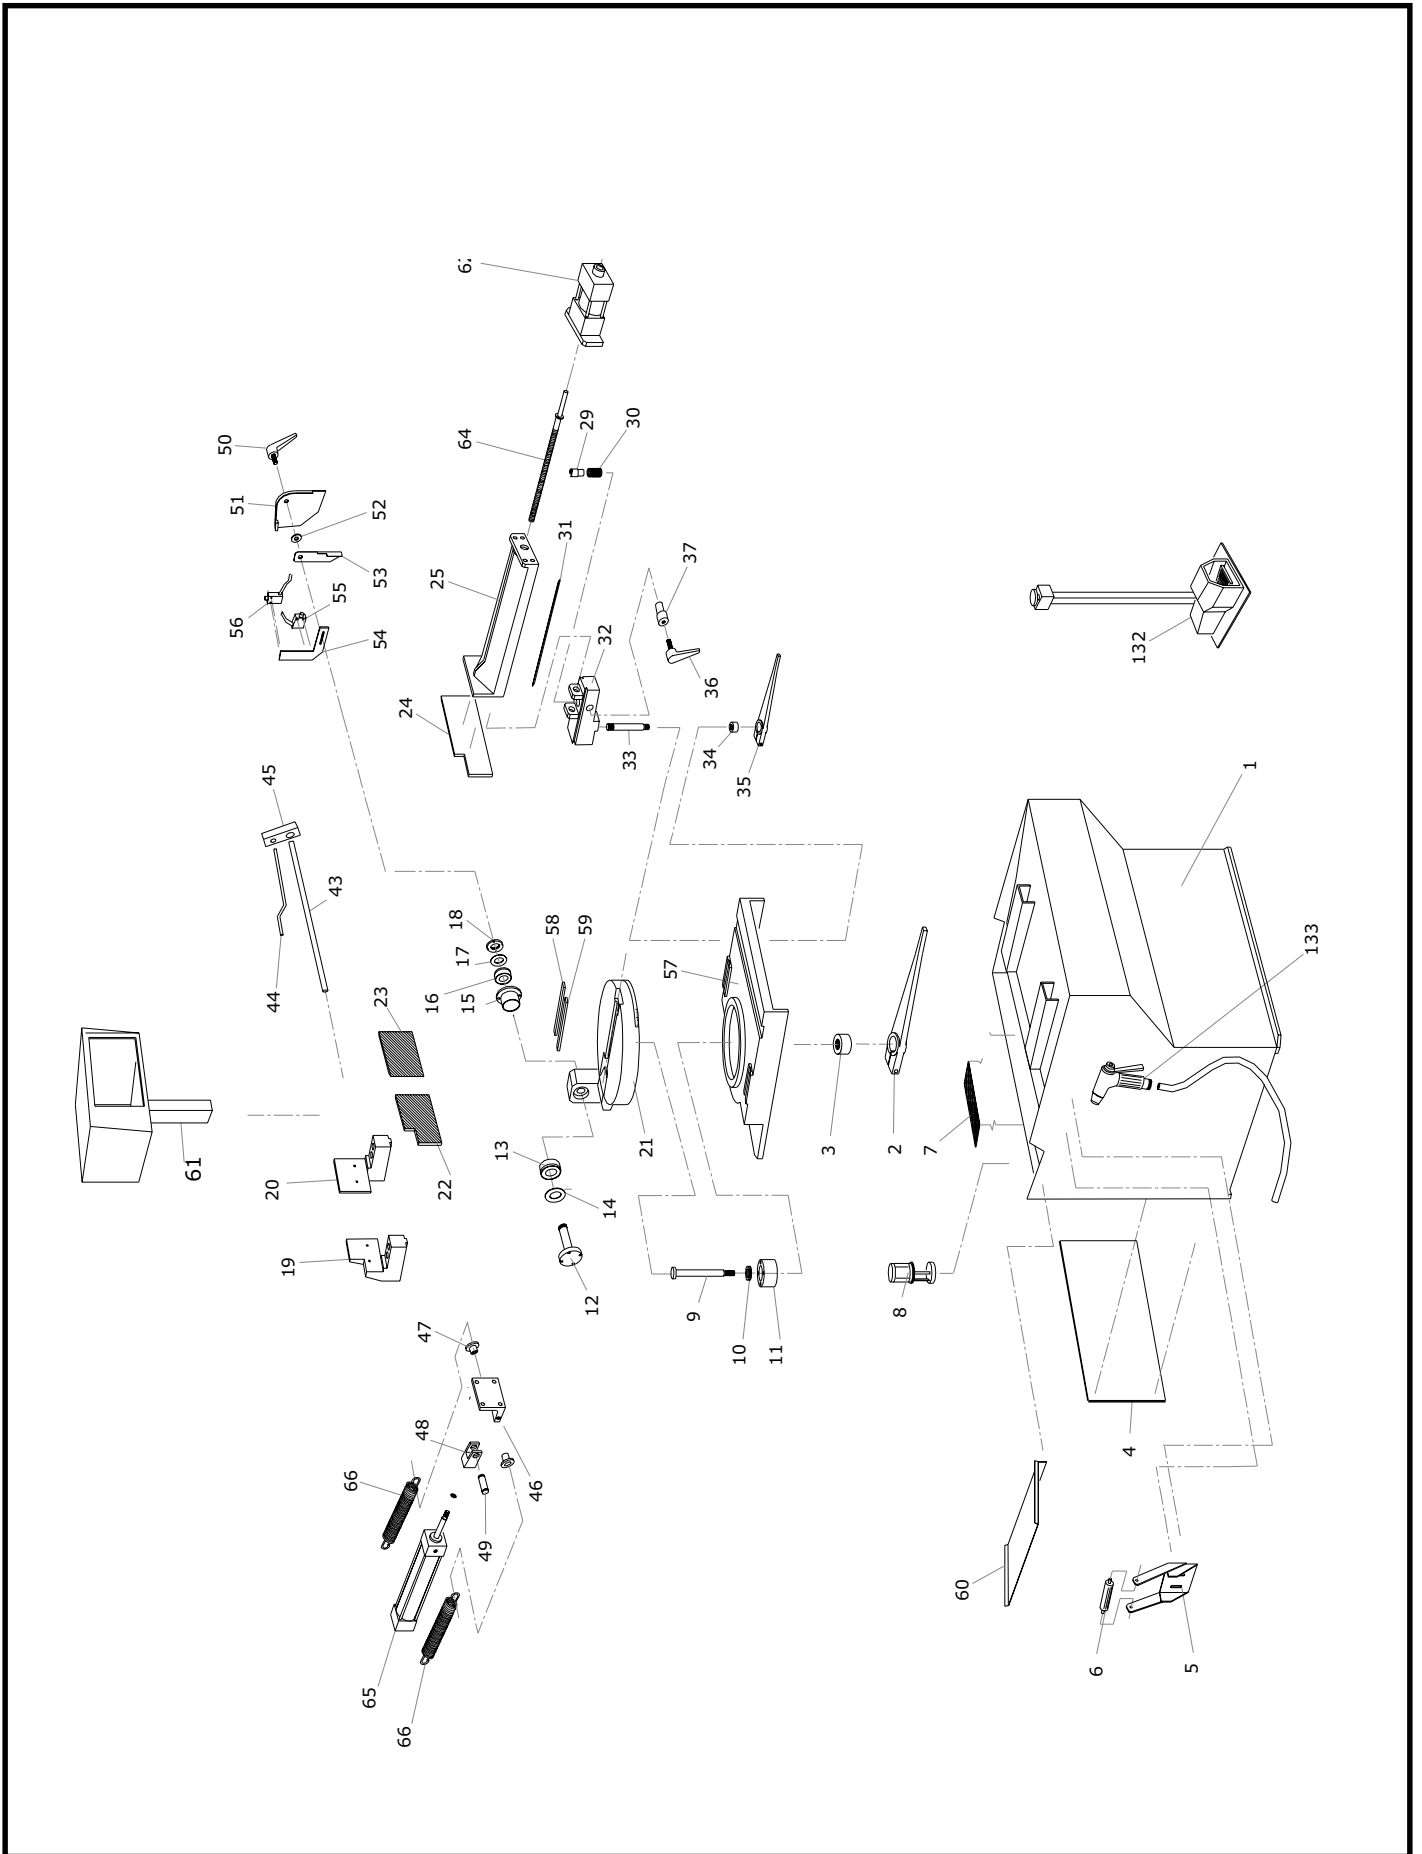

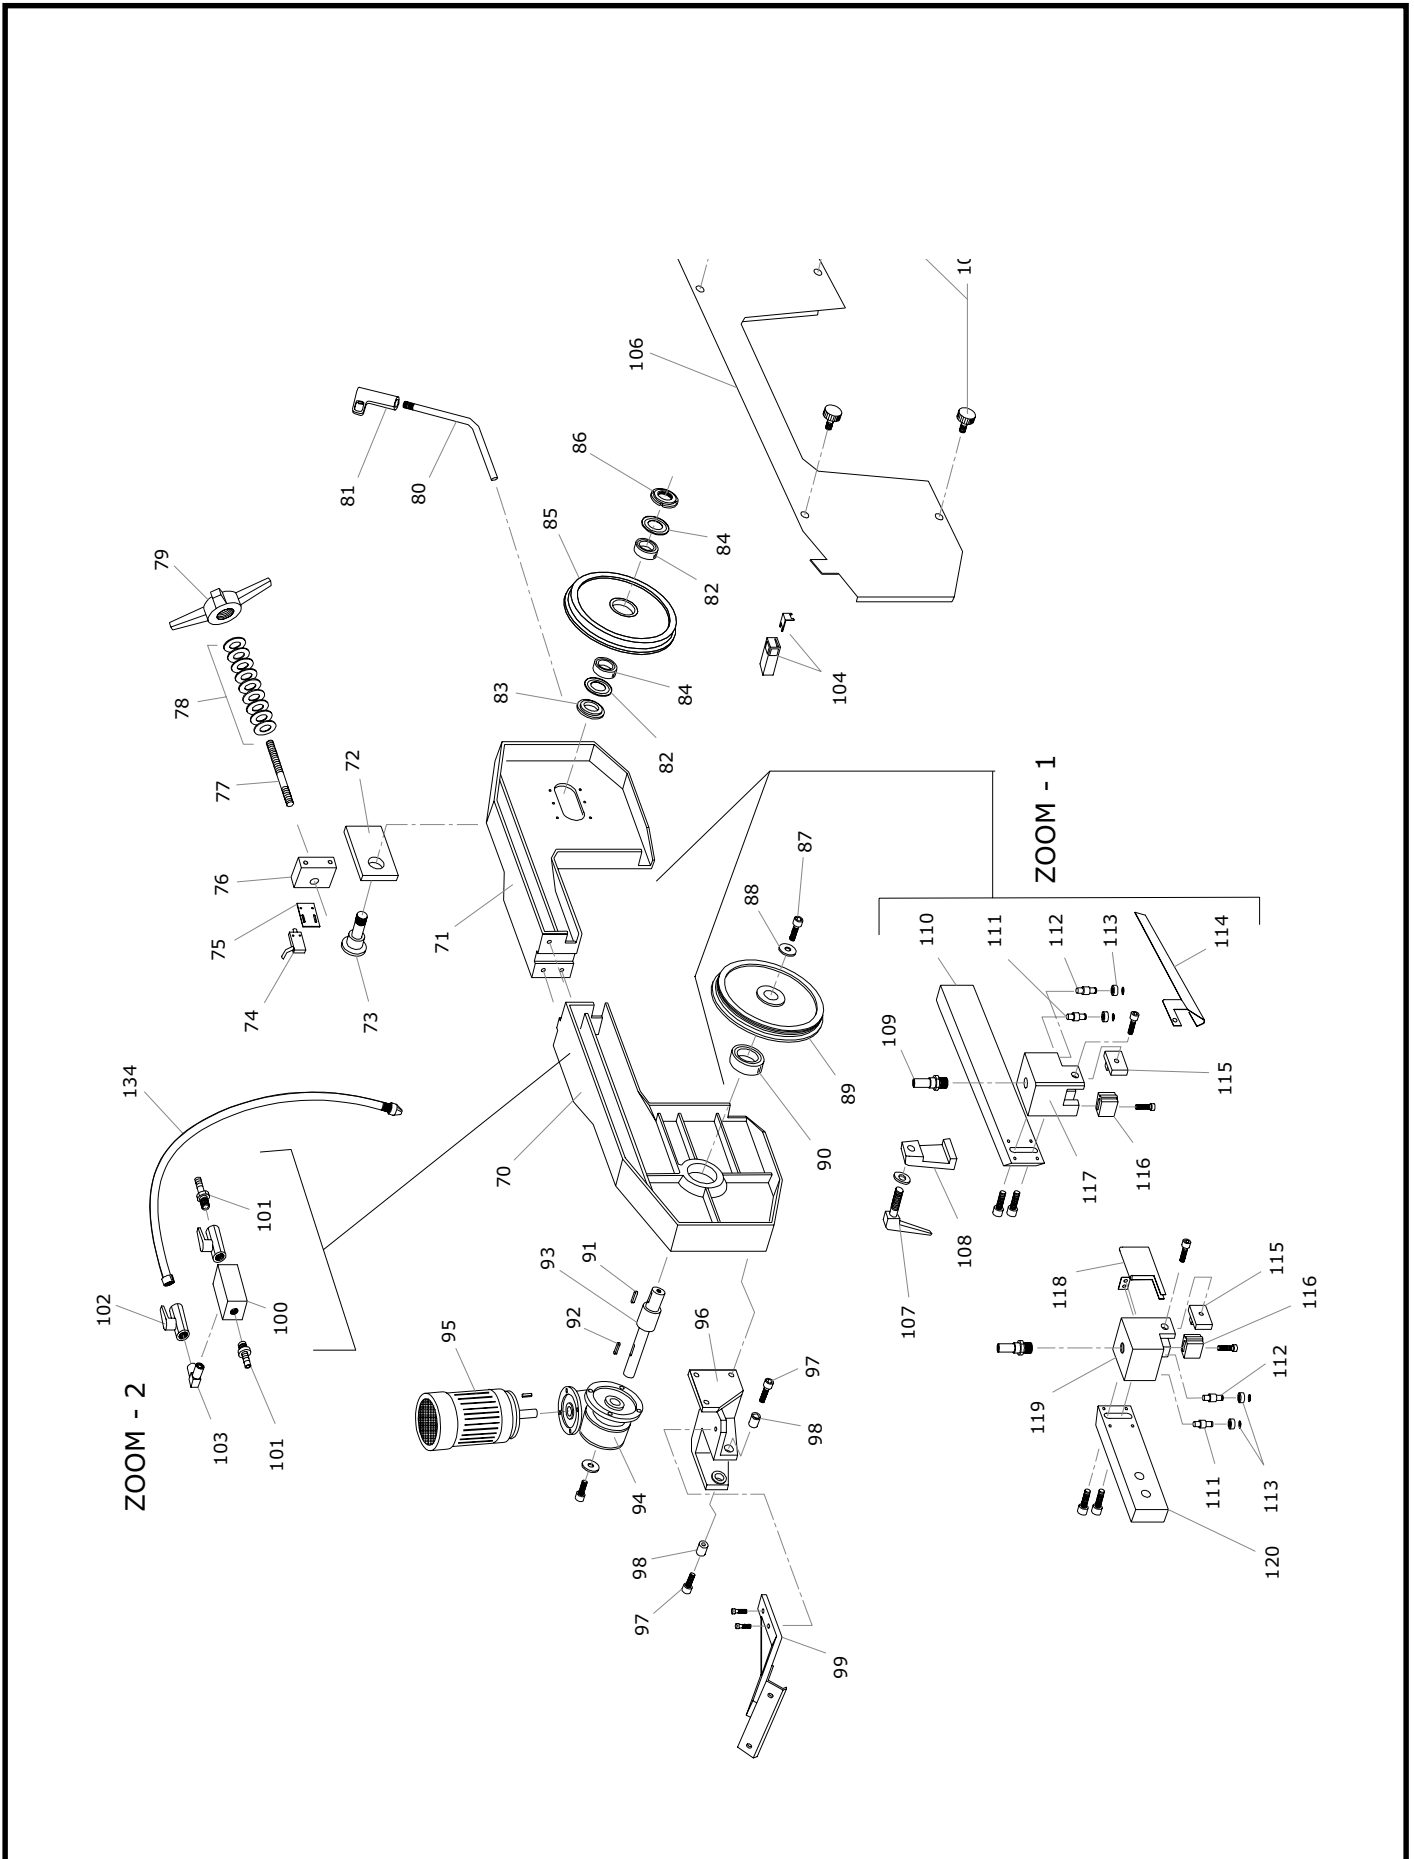


WIRING

- 460 Transformer TC
- 461 Remote switch
- 462 Remote switch
- 463 Remote switch
- 464 Remote switch
- 465 Thermal relay FR2
- 466 Thermal relay FR3
- 467 Fuse cartridge

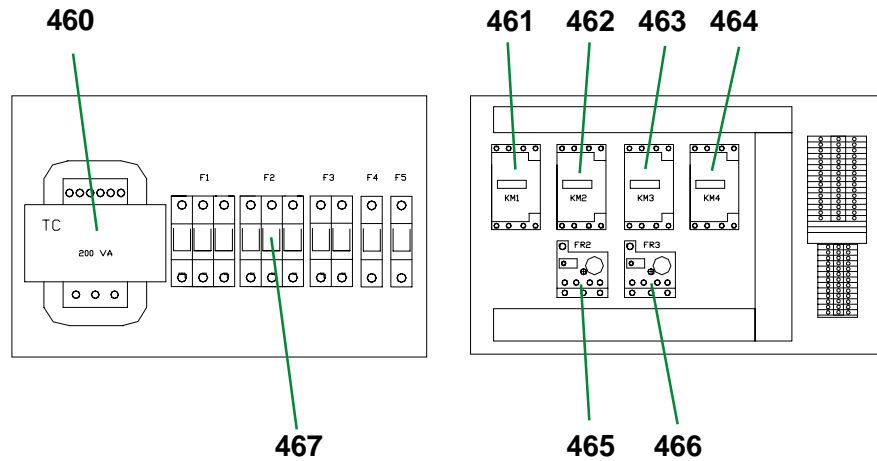

CONTROL UNIT

- 401 Emergency push button
- 402 Line push button
- 403 Electronic Instrument
- 404 Commutator
- 405 Main switch
- 406 Main switch

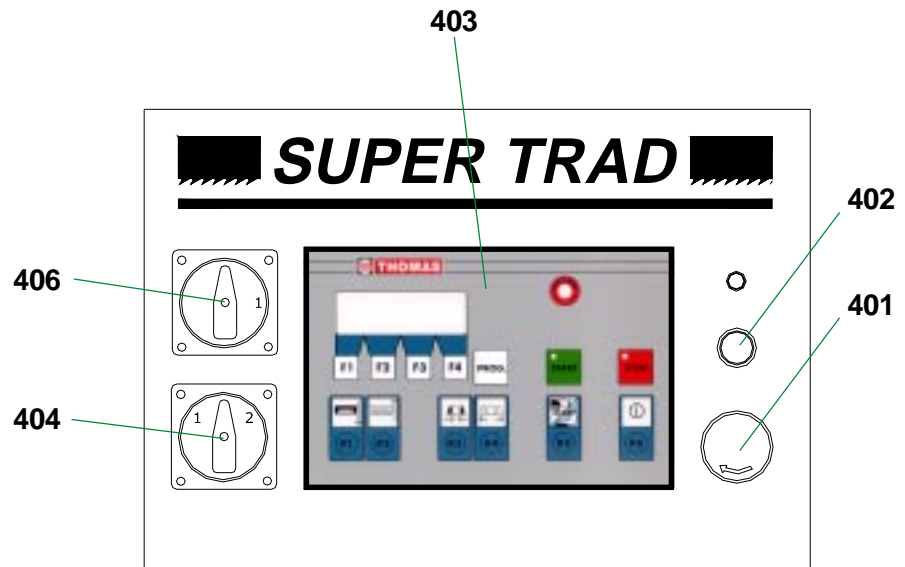

HYDRAULIC PUMP

- 501 Electrovalve -Vice-
- 502 Electrovalve -Sawframe-
- 503 Oil level
- 504 Manometer
- 505 Motor

