


### LIST OF SPARE PARTS TRAD 350 SO

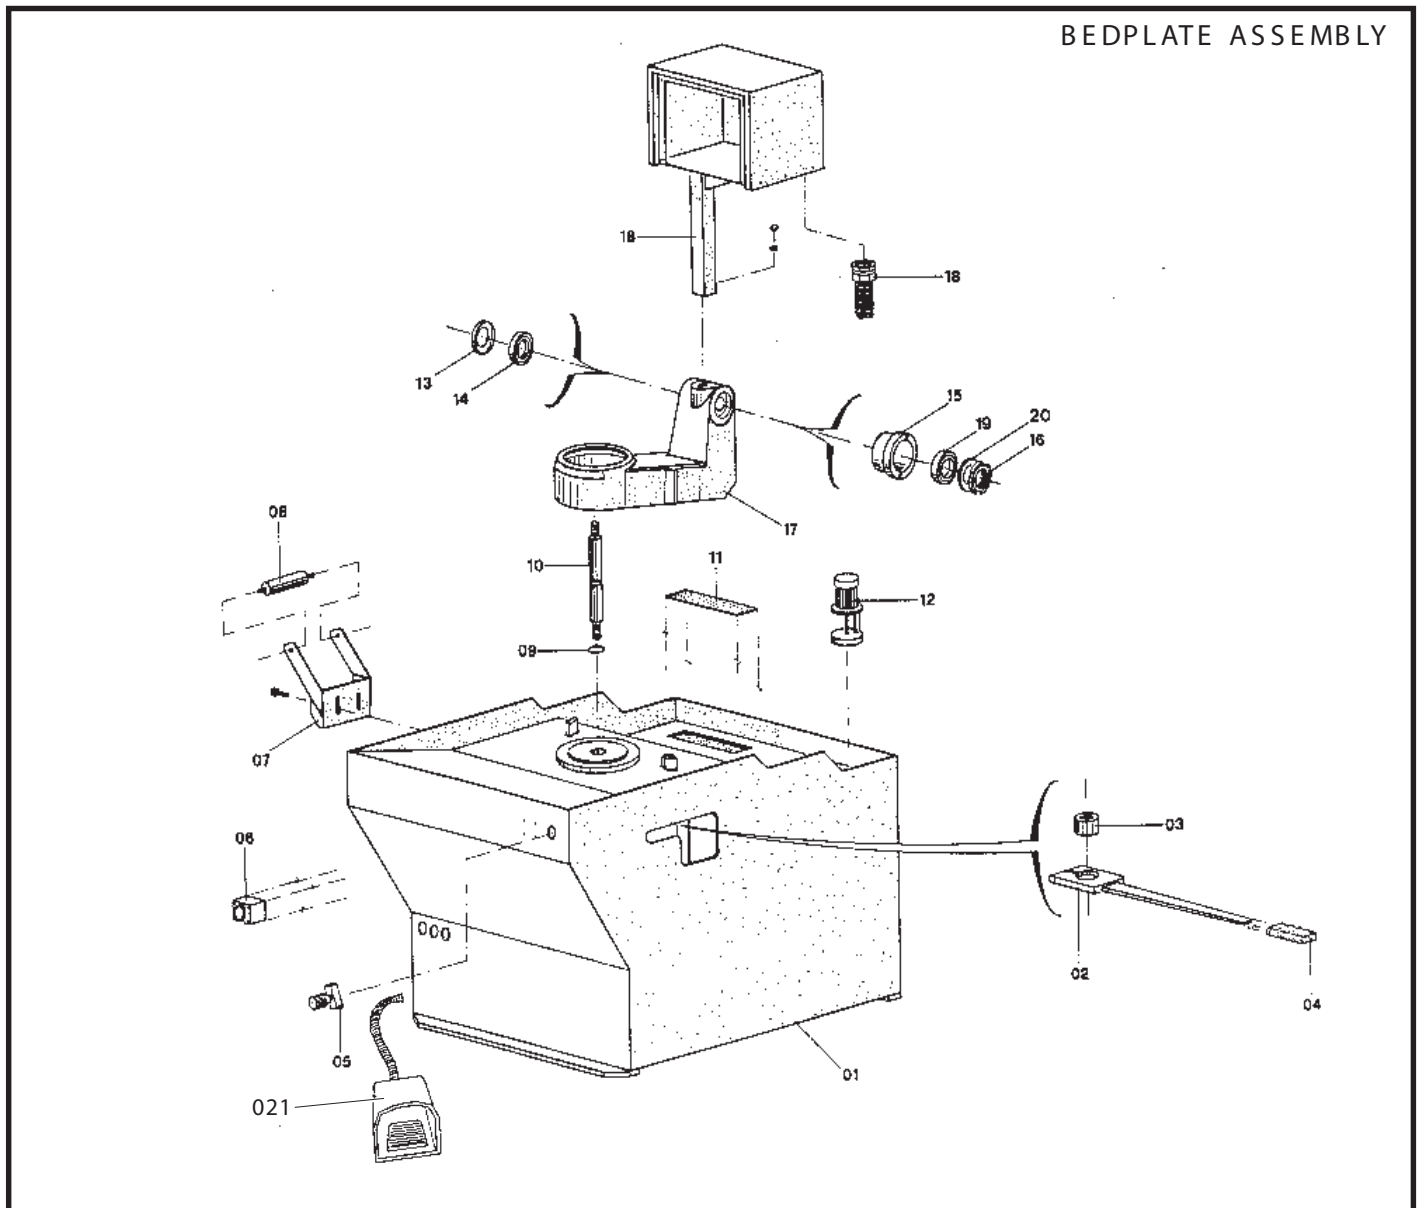

BEDPLATE ASSEMBLY


REF.NR.	DESCRIPTION	CODE
---------	-------------	------

01	Bedplate .....	010A002
02	Arm locking lever .....	120A001
03	Arm locking bush .....	AFB80012
04	Lever handgrip .....	ANA40023
05	Regolator .....	88900004
06	Emergency psh-button .....	70101000
07	Roller holding arm .....	E20A0004
08	Roller .....	49001001
09	O-Ring 4081 .....	86002004
10	Roller arm pin .....	AFA40019
11	Crucible .....	180A0005


REF.NR.	DESCRIPTION	CODE
---------	-------------	------

12	Pump .....	88140002
13	NILOS ring .....	86005005
14	Bearing 32010 X .....	84320047
15	Eccentric bush .....	080A0003
16	GUK ring nut M 45 .....	81700045
17	Arm .....	020A0001
18	Electric box .....	170E0011
19	Bearing 32009 X .....	84320039
20	NILOS ring .....	86005005
21	Start cycle foot-control ..	73901000

### SAW-FRAME CYLINDER ASSEMBLY

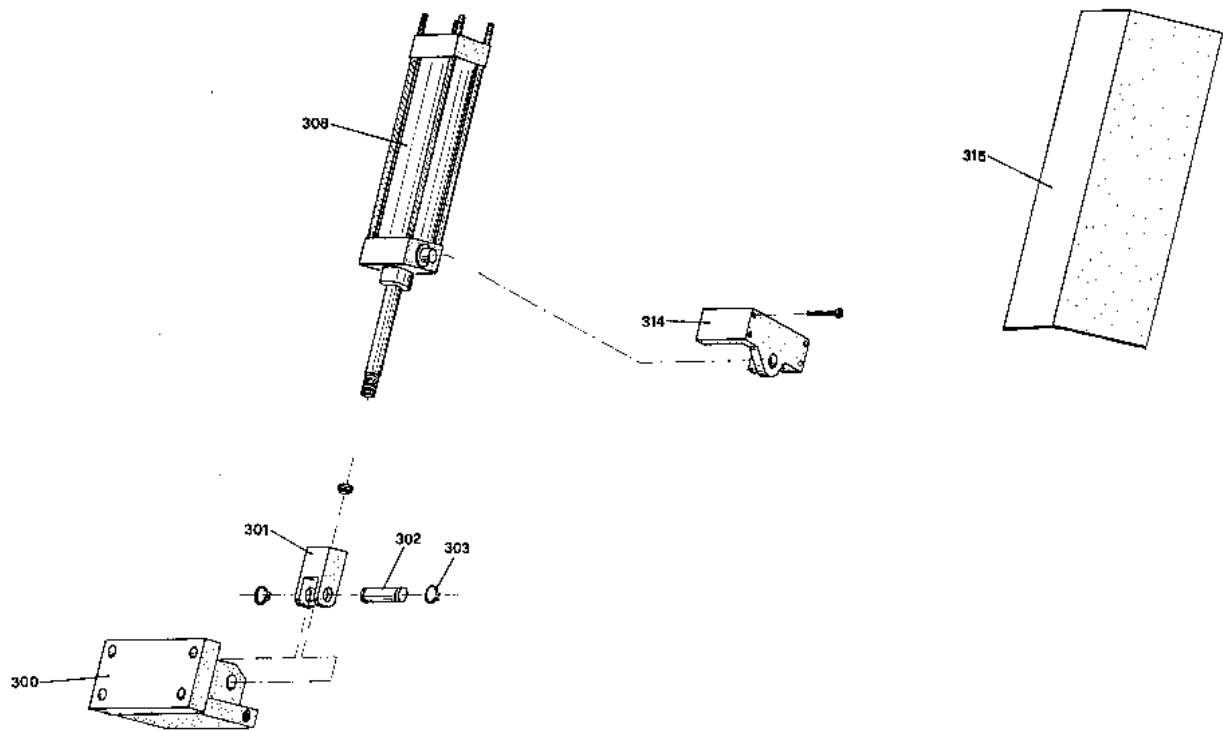

### SAW-FRAME STROKE ADJUSTING ASSEMBLY

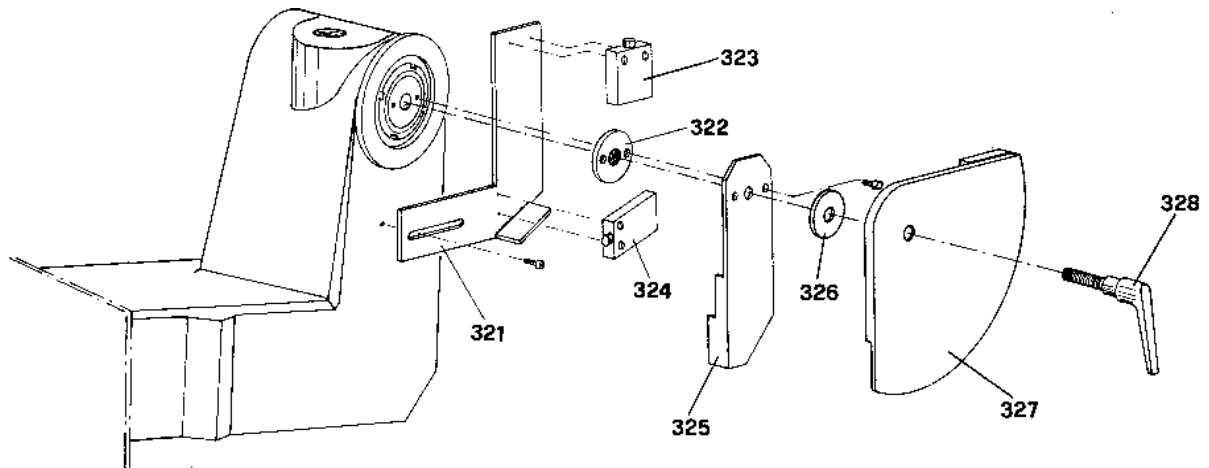


REF.NR.	DESCRIPTION	CODE
---------	-------------	------

300	Front bracket.....	110A0001
301	Cylinder fork .....	110H0006
302	Fork pin.....	AF880080
303	Seeger ring Ø 20 .....	82600000
308	Cylinder .....	200H0002
314	Cylinder bracket .....	110C0001
315	Cylinder guard .....	160H0002

REF.NR.	DESCRIPTION	CODE
---------	-------------	------

321	Microswitch hold plate .	110H0010
322	Bush .....	080H0001
323	Microswitch.....	72212000
324	Microswitch.....	72212000
325	Plate for saw-fr.low pos.	110H0009
326	Washer .....	82100000
327	Plate for saw-fr.up. pos.	110H0008
328	Handle .....	46108000


### VICE ASSEMBLY

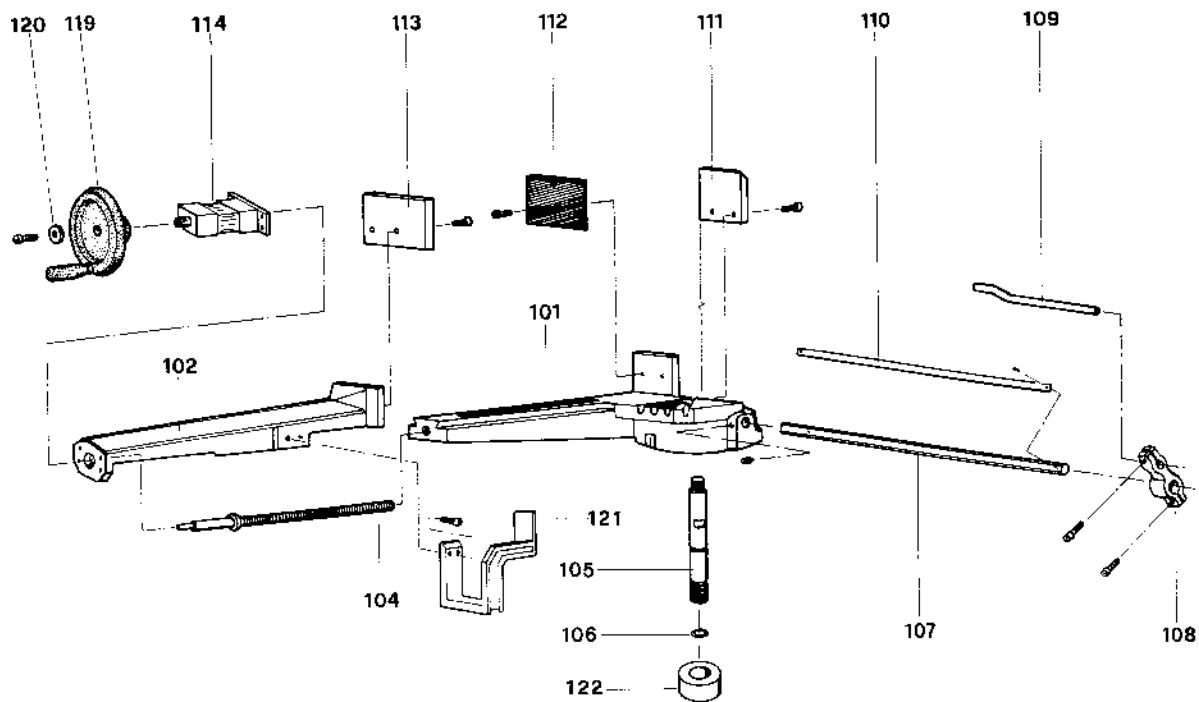


REF.NR.	DESCRIPTION	CODE
101	Straight countervise .....	AGA40070
102	Straight vice .....	AGA40071
103		
104	Vice screw .....	AFB40032
105	Pin .....	AFA40019
106	OR ring 4081 .....	86002004
107	Bar stop rod .....	AFB80024
108	Bar stop body .....	AG660047
109	Bar stop push rod .....	AFC40109
110	Bar stop rod scale .....	AHB80026
111	Countervise r.h. jaw .....	AGA40037

REF.NR.	DESCRIPTION	CODE
112	Countervise jaw .....	AFA40074
113	Vice jaw .....	AFA40072
114	Vice cylinder .....	78100051
115		
116		
119	Vice handwheel .....	44116418
120	Washer .....	82100000
121	Anti-burr plate .....	AFA40076
122	Arm locking bushing ....	AFB80012

## SAW-FRAME ASSEMBLY

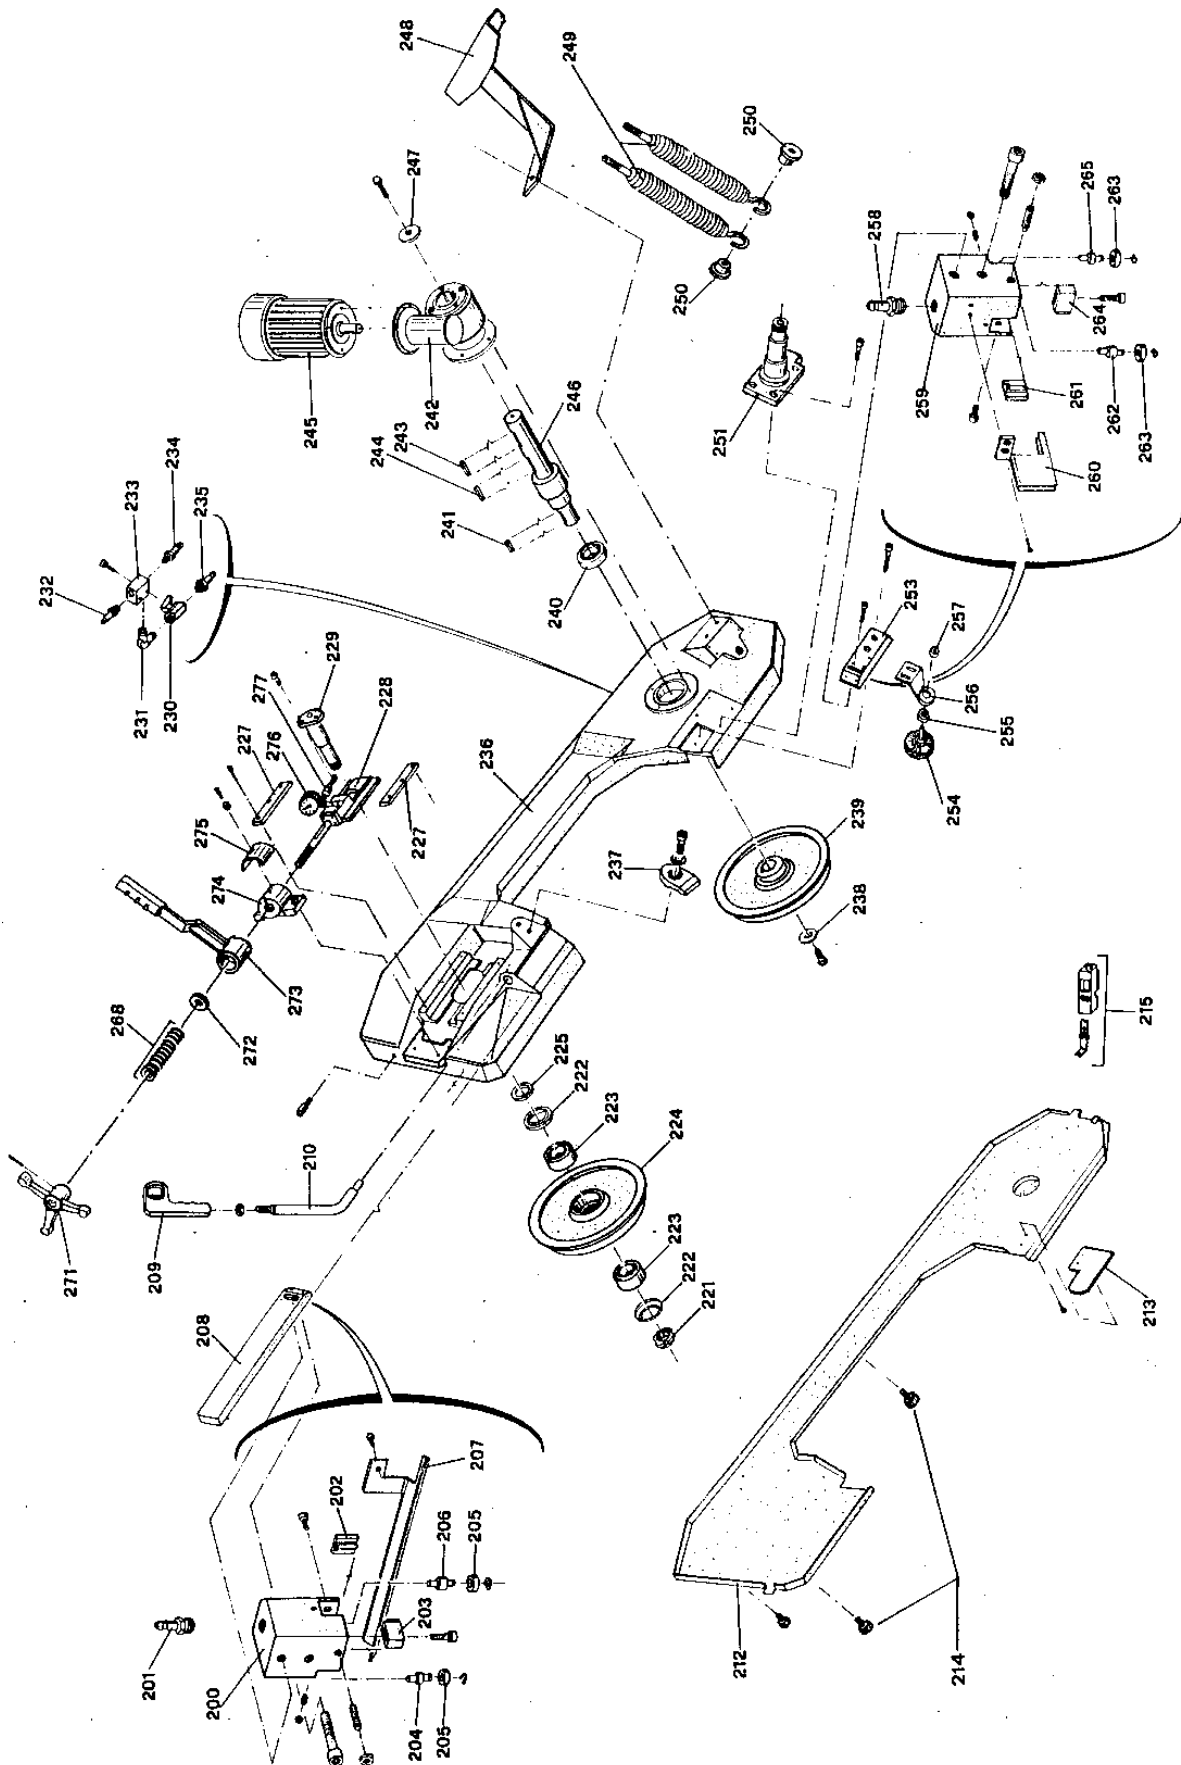

458 459 460 461 462 463

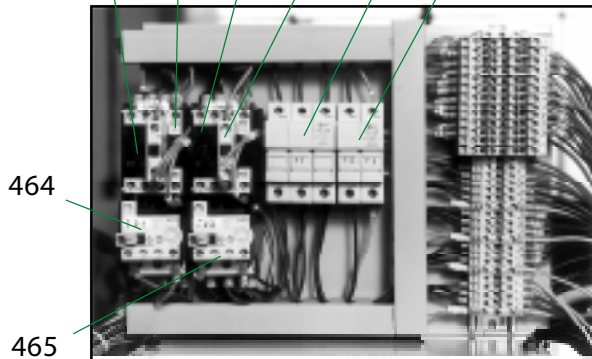

KEY

450 Auxiliary relay .....	72300000
451 Auxiliary relay .....	72300000
452 Auxiliary relay .....	72300000
453 Auxiliary relay .....	72300000
454 Auxiliary relay .....	72300000
455 KT Timer .....	73500000
456 TC1 transformer .....	73320011
457 Terminal board .....	68303012
458 KM1 remote control switch .....	73401001
459 Auxiliary contact .....	72610001
460 KM2 remote control switch .....	73401001
461 Auxiliary contact .....	72610001
462 Fuse holder .....	73142005
463 Fuse holder .....	73142005
464 FR1 temperature relay .....	72607001
465 FR2 temperature relay .....	72607001
466 KT Timer .....	73500000


KEY

401 Main switch .....	70201001
402 Start push-button .....	70101000
403 Speed switch .....	70201015
404 Saw-frame selector .....	71100000
405 Cycle start push-button .....	70101000


KEY

501 Vice hydraulic solenoid valve .....	88121027
502 Saw-frame hydraulic solenoid v. ...	88121027
503 Unit oil level .....	88121017
504 Pressure gauge .....	88101000
505 Hydraulic unit motor .....	74302060
506 Plug .....	88121016

455 466 456

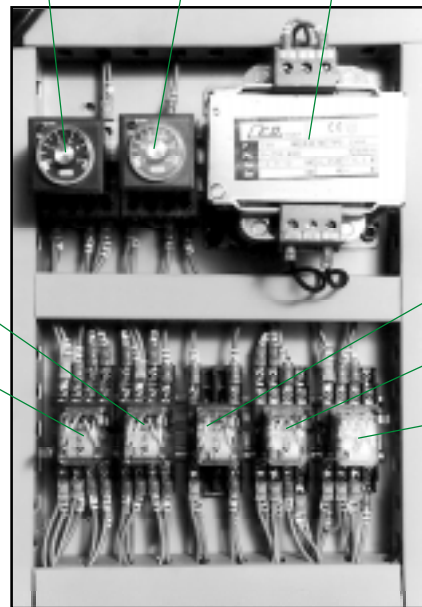


453 454 450 451 452

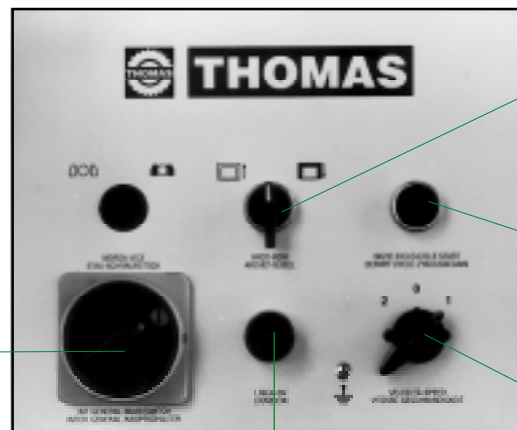

404 405 403 402

504 501 502 505

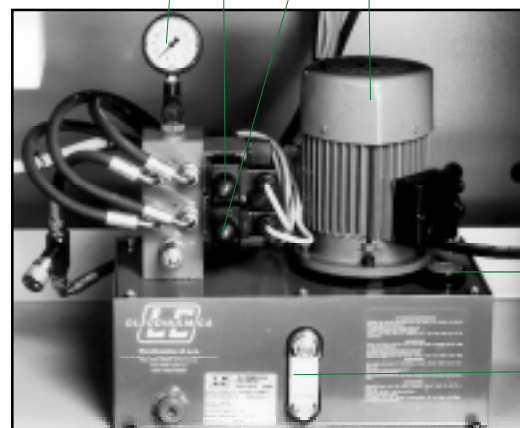

506 503