


### LIST OF SPARE PARTS TRAD 350 SO

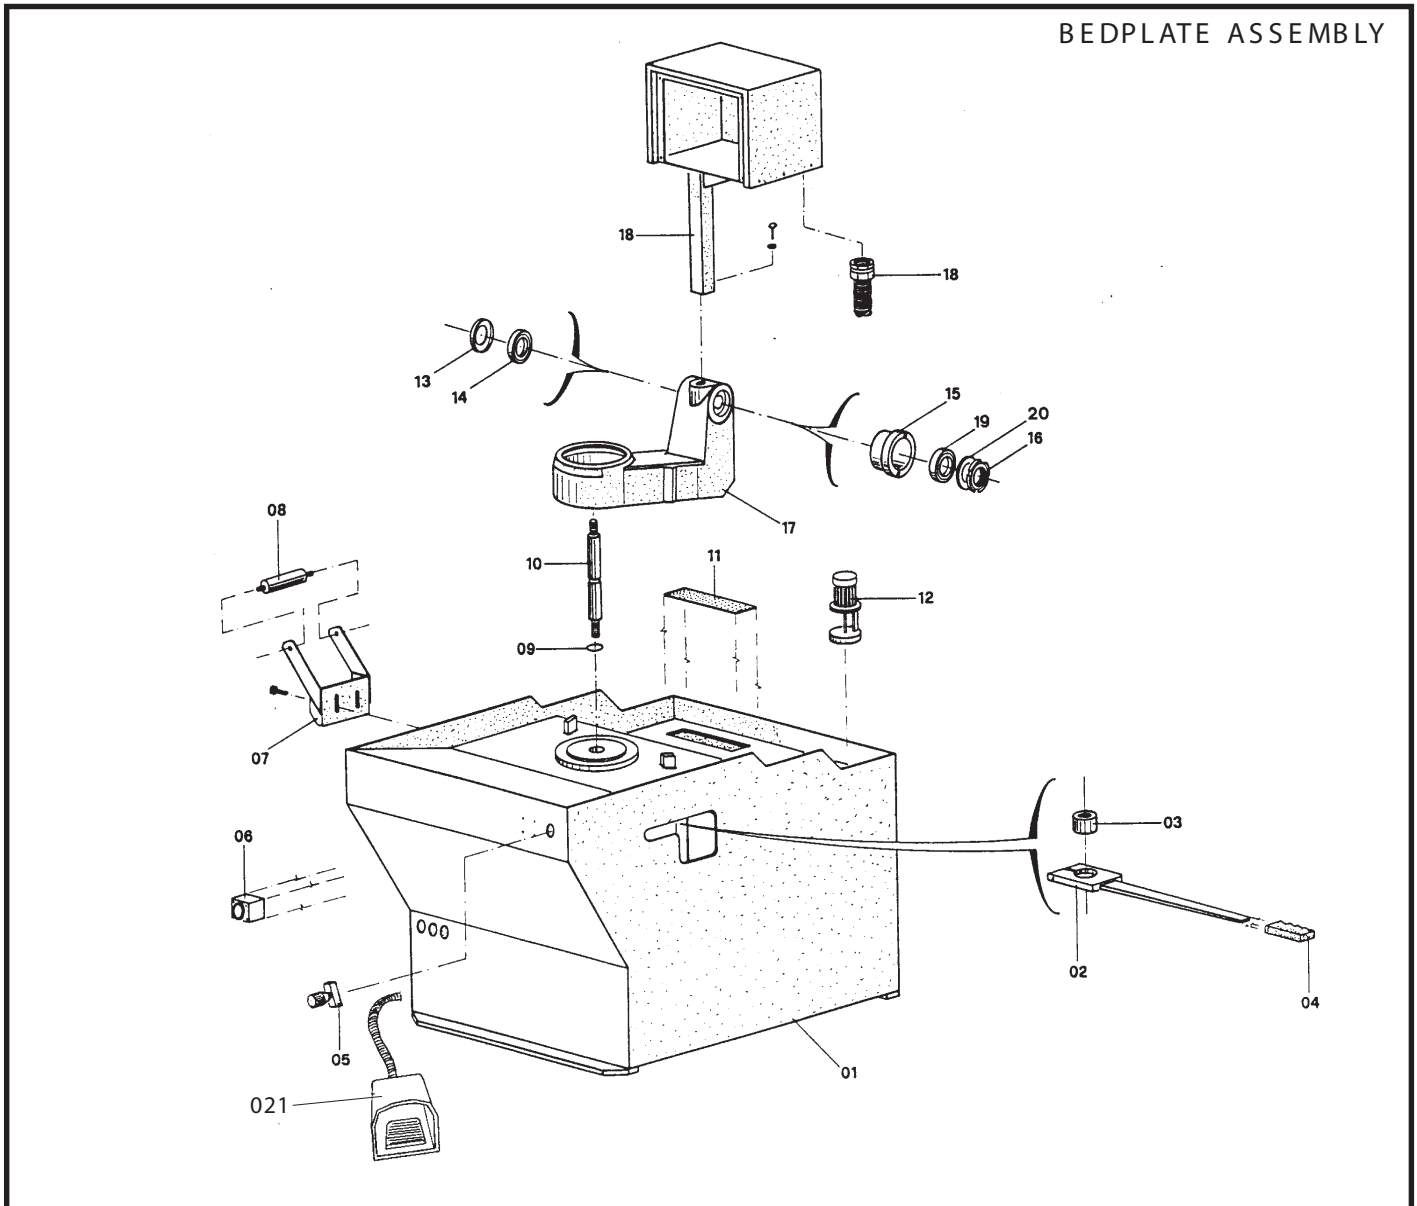

BEDPLATE ASSEMBLY


| REF.NR. | DESCRIPTION | CODE |
|---------|-------------|------|
|---------|-------------|------|

|    |                            |          |
|----|----------------------------|----------|
| 01 | Bedplate .....             | 010A002  |
| 02 | Arm locking lever .....    | 120A001  |
| 03 | Arm locking bush .....     | AFB80012 |
| 04 | Lever handgrip .....       | ANA40023 |
| 05 | Regolator .....            | 88900004 |
| 06 | Emergency psh-button ..... | 70101000 |
| 07 | Roller holding arm .....   | E20A0004 |
| 08 | Roller .....               | 49001001 |
| 09 | O-Ring 4081 .....          | 86002004 |
| 10 | Roller arm pin .....       | AFA40019 |
| 11 | Crucible .....             | 180A0005 |


| REF.NR. | DESCRIPTION | CODE |
|---------|-------------|------|
|---------|-------------|------|

|    |                             |          |
|----|-----------------------------|----------|
| 12 | Pump .....                  | 88140002 |
| 13 | NILOS ring .....            | 86005005 |
| 14 | Bearing 32010 X .....       | 84320047 |
| 15 | Eccentric bush .....        | 080A0003 |
| 16 | GUK ring nut M 45 .....     | 81700045 |
| 17 | Arm .....                   | 020A0001 |
| 18 | Electric box .....          | 170E0011 |
| 19 | Bearing 32009 X .....       | 84320039 |
| 20 | NILOS ring .....            | 86005005 |
| 21 | Start cycle foot-control .. | 73901000 |

### SAW-FRAME CYLINDER ASSEMBLY

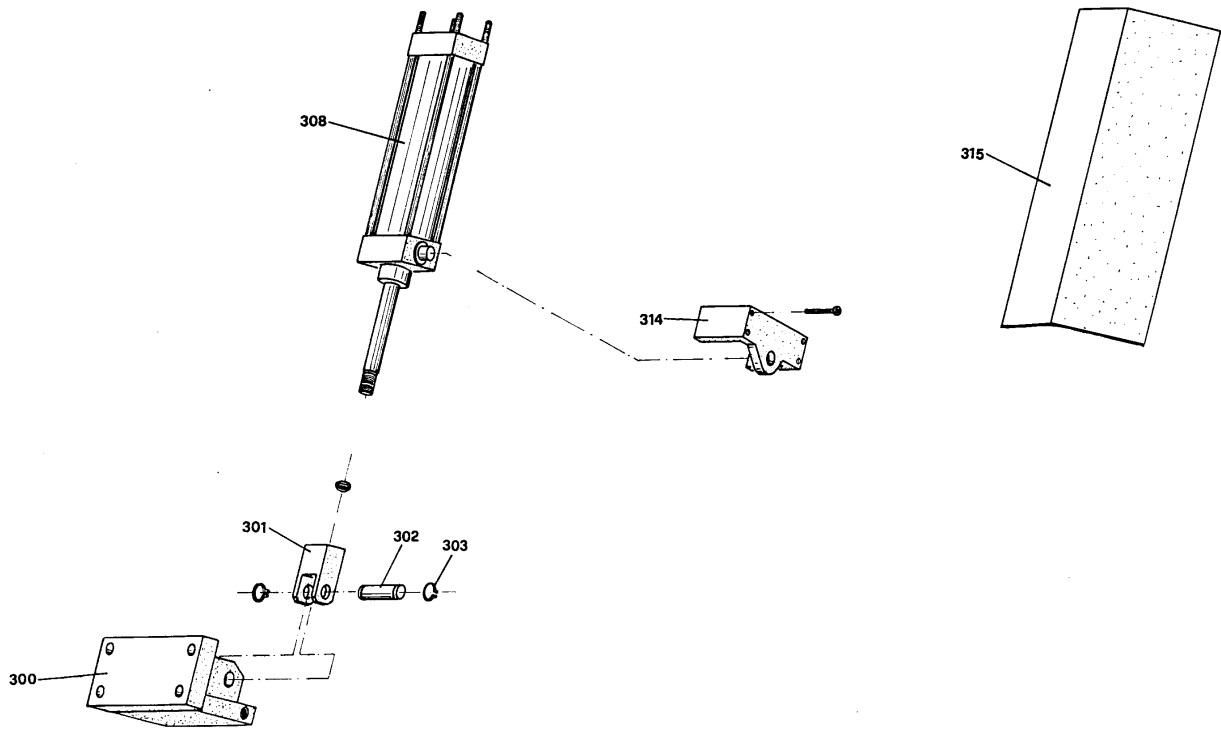

### SAW-FRAME STROKE ADJUSTING ASSEMBLY

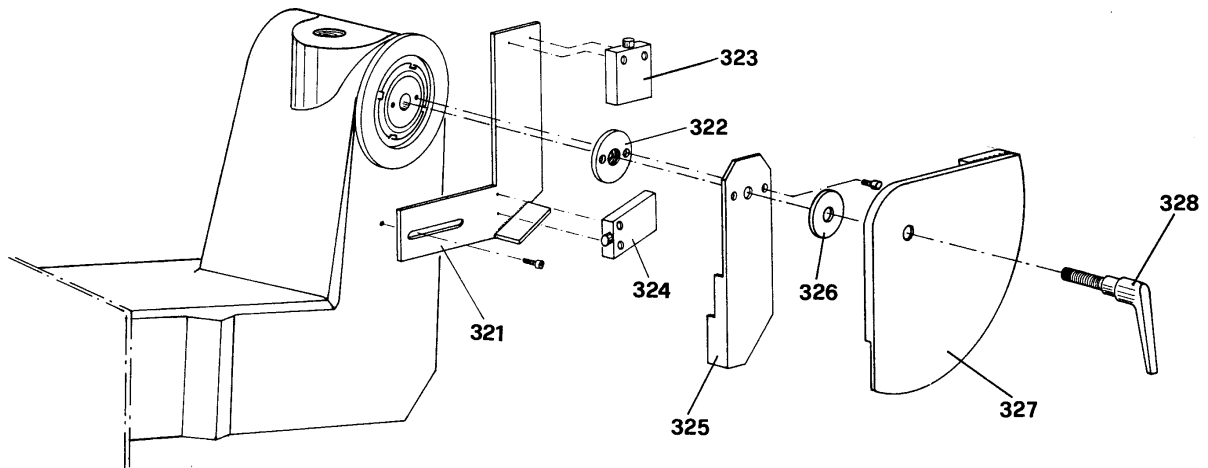


| REF.NR. | DESCRIPTION | CODE |
|---------|-------------|------|
|---------|-------------|------|

|     |                        |          |
|-----|------------------------|----------|
| 300 | Front bracket.....     | 110A0001 |
| 301 | Cylinder fork .....    | 110H0006 |
| 302 | Fork pin.....          | AF880080 |
| 303 | Seeger ring Ø 20 ..... | 82600000 |
| 308 | Cylinder .....         | 200H0002 |
| 314 | Cylinder bracket ..... | 110C0001 |
| 315 | Cylinder guard .....   | 160H0002 |

| REF.NR. | DESCRIPTION | CODE |
|---------|-------------|------|
|---------|-------------|------|

|     |                           |          |
|-----|---------------------------|----------|
| 321 | Microswitch hold plate .  | 110H0010 |
| 322 | Bush .....                | 080H0001 |
| 323 | Microswitch.....          | 72212000 |
| 324 | Microswitch.....          | 72212000 |
| 325 | Plate for saw-fr.low pos. | 110H0009 |
| 326 | Washer .....              | 82100000 |
| 327 | Plate for saw-fr.up. pos. | 110H0008 |
| 328 | Handle .....              | 46108000 |

### VICE ASSEMBLY

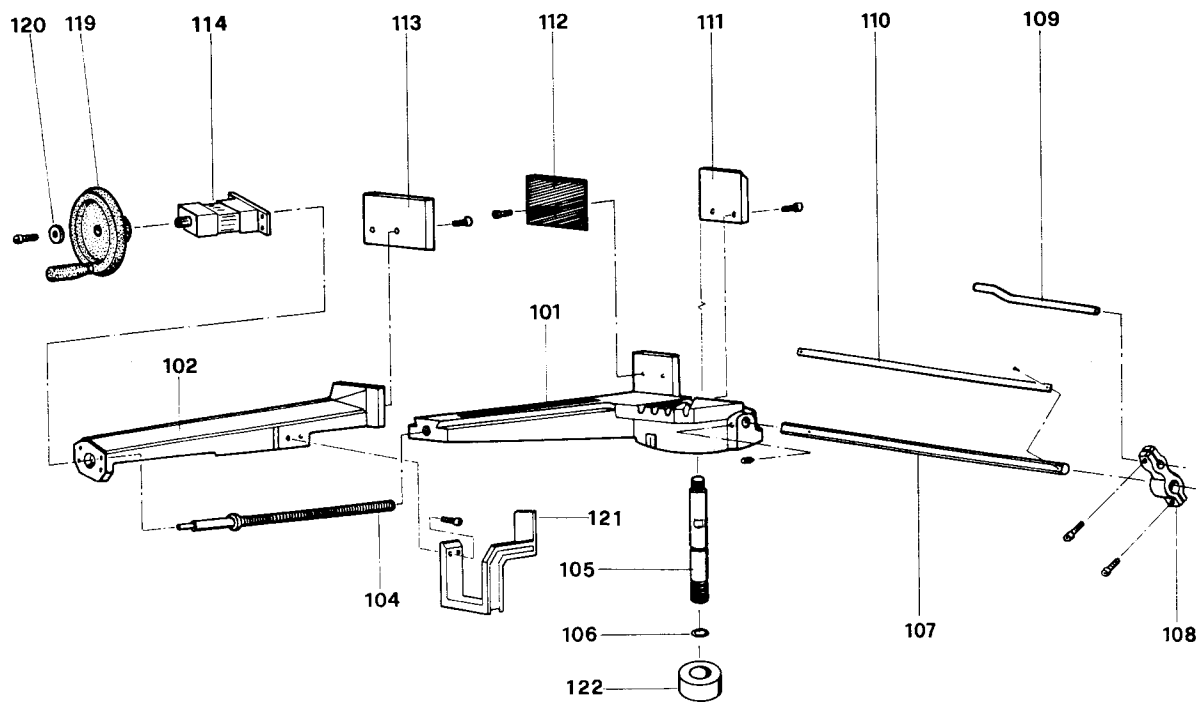

| REF.NR. | DESCRIPTION | CODE |
|---------|-------------|------|
|---------|-------------|------|


|     |                            |          |
|-----|----------------------------|----------|
| 101 | Straight countervise ..... | AGA40070 |
| 102 | Straight vice .....        | AGA40071 |
| 103 |                            |          |
| 104 | Vice screw .....           | AFB40032 |
| 105 | Pin .....                  | AFA40019 |
| 106 | OR ring 4081 .....         | 86002004 |
| 107 | Bar stop rod .....         | AFB80024 |
| 108 | Bar stop body .....        | AG660047 |
| 109 | Bar stop push rod .....    | AFC40109 |
| 110 | Bar stop rod scale .....   | AHB80026 |
| 111 | Countervise r.h. jaw ..... | AGA40037 |

| REF.NR. | DESCRIPTION | CODE |
|---------|-------------|------|
|---------|-------------|------|

|     |                          |          |
|-----|--------------------------|----------|
| 112 | Countervise jaw .....    | AFA40074 |
| 113 | Vice jaw .....           | AFA40072 |
| 114 | Vice cylinder .....      | 78100051 |
| 115 |                          |          |
| 116 |                          |          |
| 119 | Vice handwheel .....     | 44116418 |
| 120 | Washer .....             | 82100000 |
| 121 | Anti-burr plate .....    | AFA40076 |
| 122 | Arm locking bushing .... | AFB80012 |




## SAW-FRAME ASSEMBLY

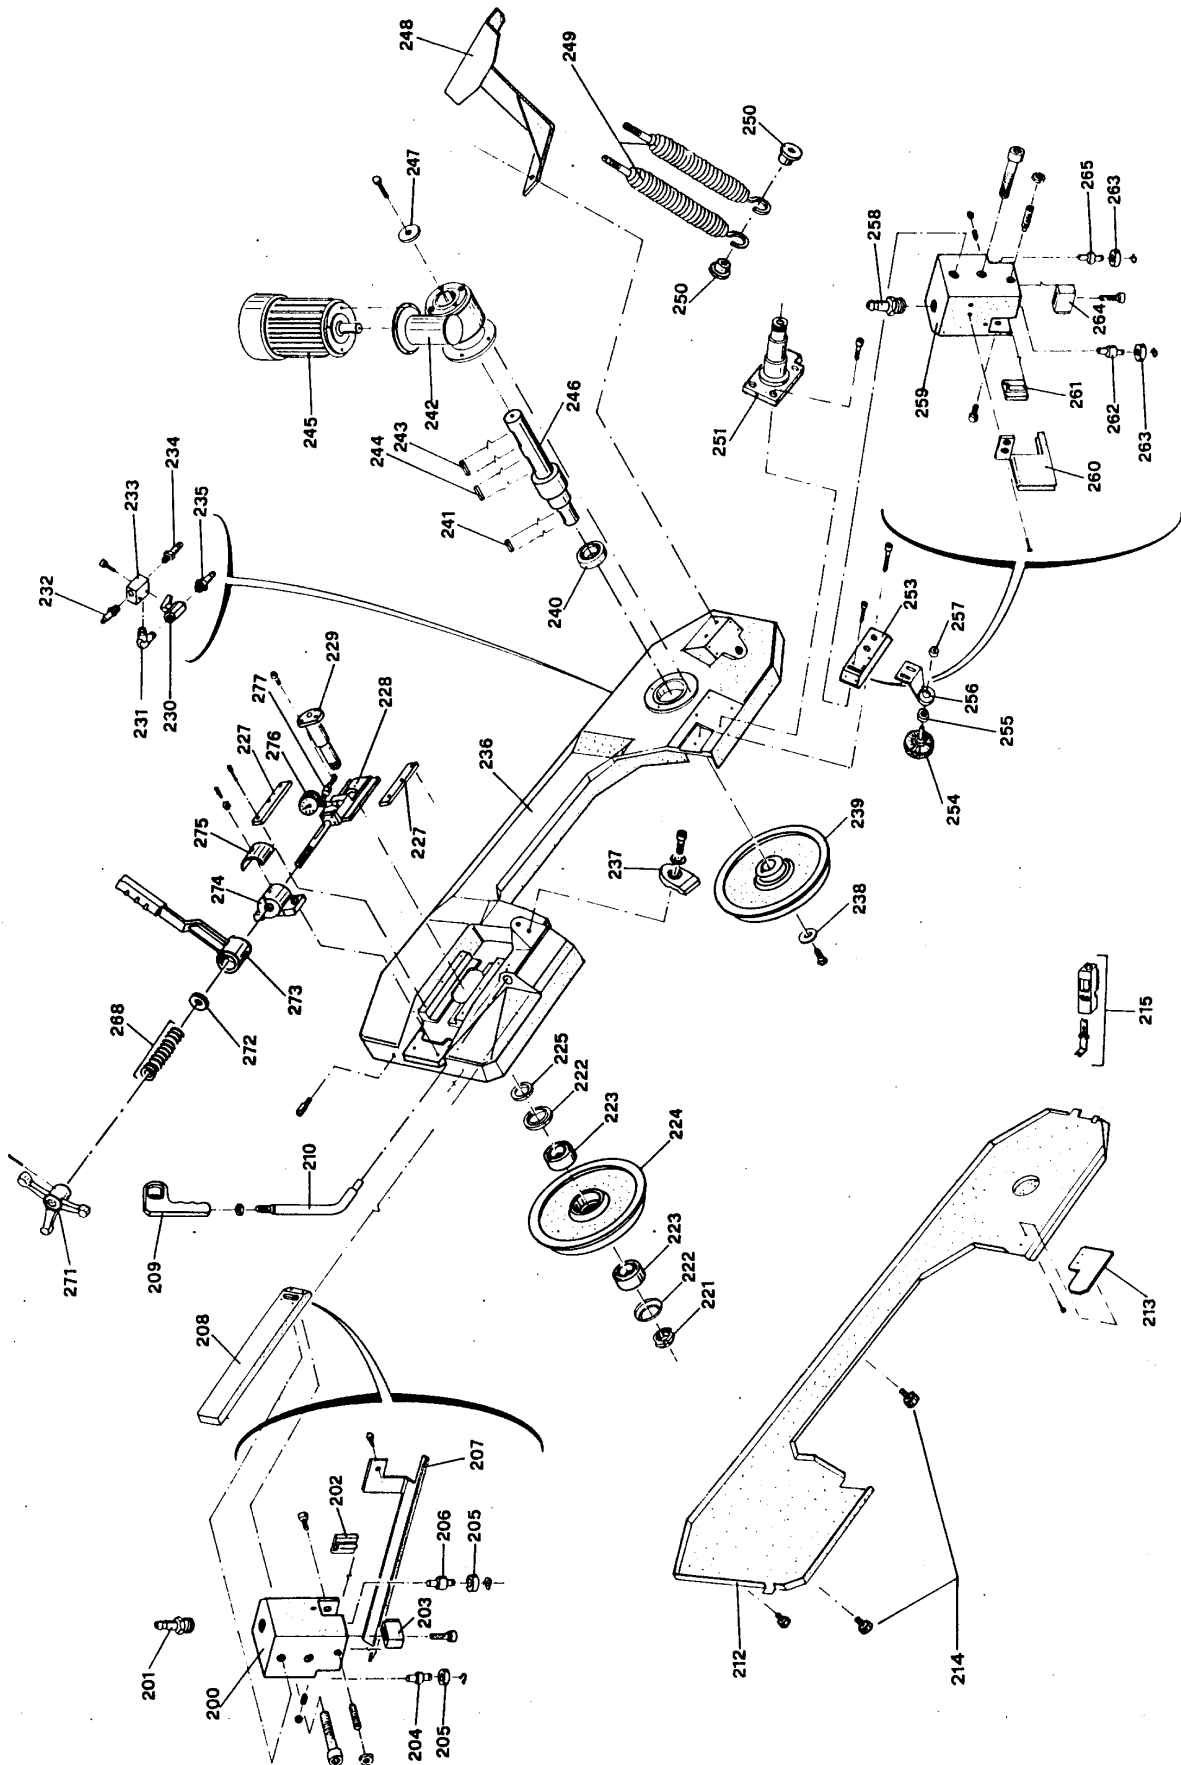



458 459 460 461 462 463

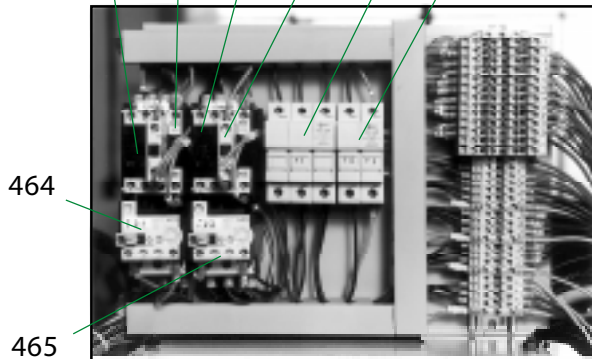

KEY

|                                     |          |
|-------------------------------------|----------|
| 450 Auxiliary relay .....           | 72300000 |
| 451 Auxiliary relay .....           | 72300000 |
| 452 Auxiliary relay .....           | 72300000 |
| 453 Auxiliary relay .....           | 72300000 |
| 454 Auxiliary relay .....           | 72300000 |
| 455 KT Timer .....                  | 73500000 |
| 456 TC1 transformer .....           | 73320011 |
| 457 Terminal board .....            | 68303012 |
| 458 KM1 remote control switch ..... | 73401001 |
| 459 Auxiliary contact .....         | 72610001 |
| 460 KM2 remote control switch ..... | 73401001 |
| 461 Auxiliary contact .....         | 72610001 |
| 462 Fuse holder .....               | 73142005 |
| 463 Fuse holder .....               | 73142005 |
| 464 FR1 temperature relay .....     | 72607001 |
| 465 FR2 temperature relay .....     | 72607001 |
| 466 KT Timer .....                  | 73500000 |



KEY

|                                   |          |
|-----------------------------------|----------|
| 401 Main switch .....             | 70201001 |
| 402 Start push-button .....       | 70101000 |
| 403 Speed switch .....            | 70201015 |
| 404 Saw-frame selector .....      | 71100000 |
| 405 Cycle start push-button ..... | 70101000 |

KEY

|   |          |
|---|----------|
| 501 Vice hydraulic solenoid valve ..... | 88121027 |
| 502 Saw-frame hydraulic solenoid v. ... | 88121027 |
| 503 Unit oil level .....                | 88121017 |
| 504 Pressure gauge .....                | 88101000 |
| 505 Hydraulic unit motor .....          | 74302060 |
| 506 Plug .....                          | 88121016 |

455 466 456

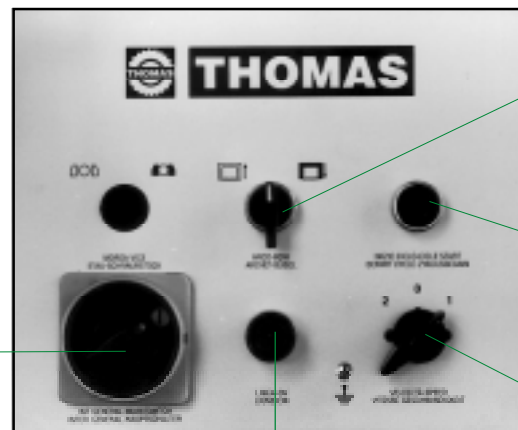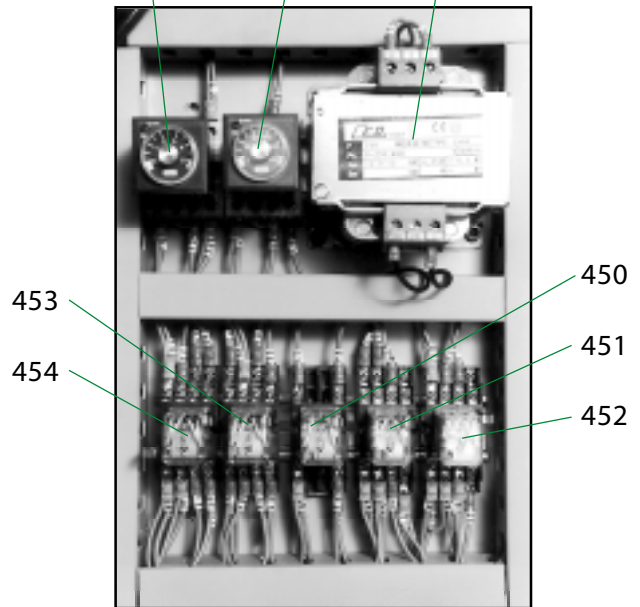

504 501 502 505

