




- LIST OF SPARE PARTS TRAD 350

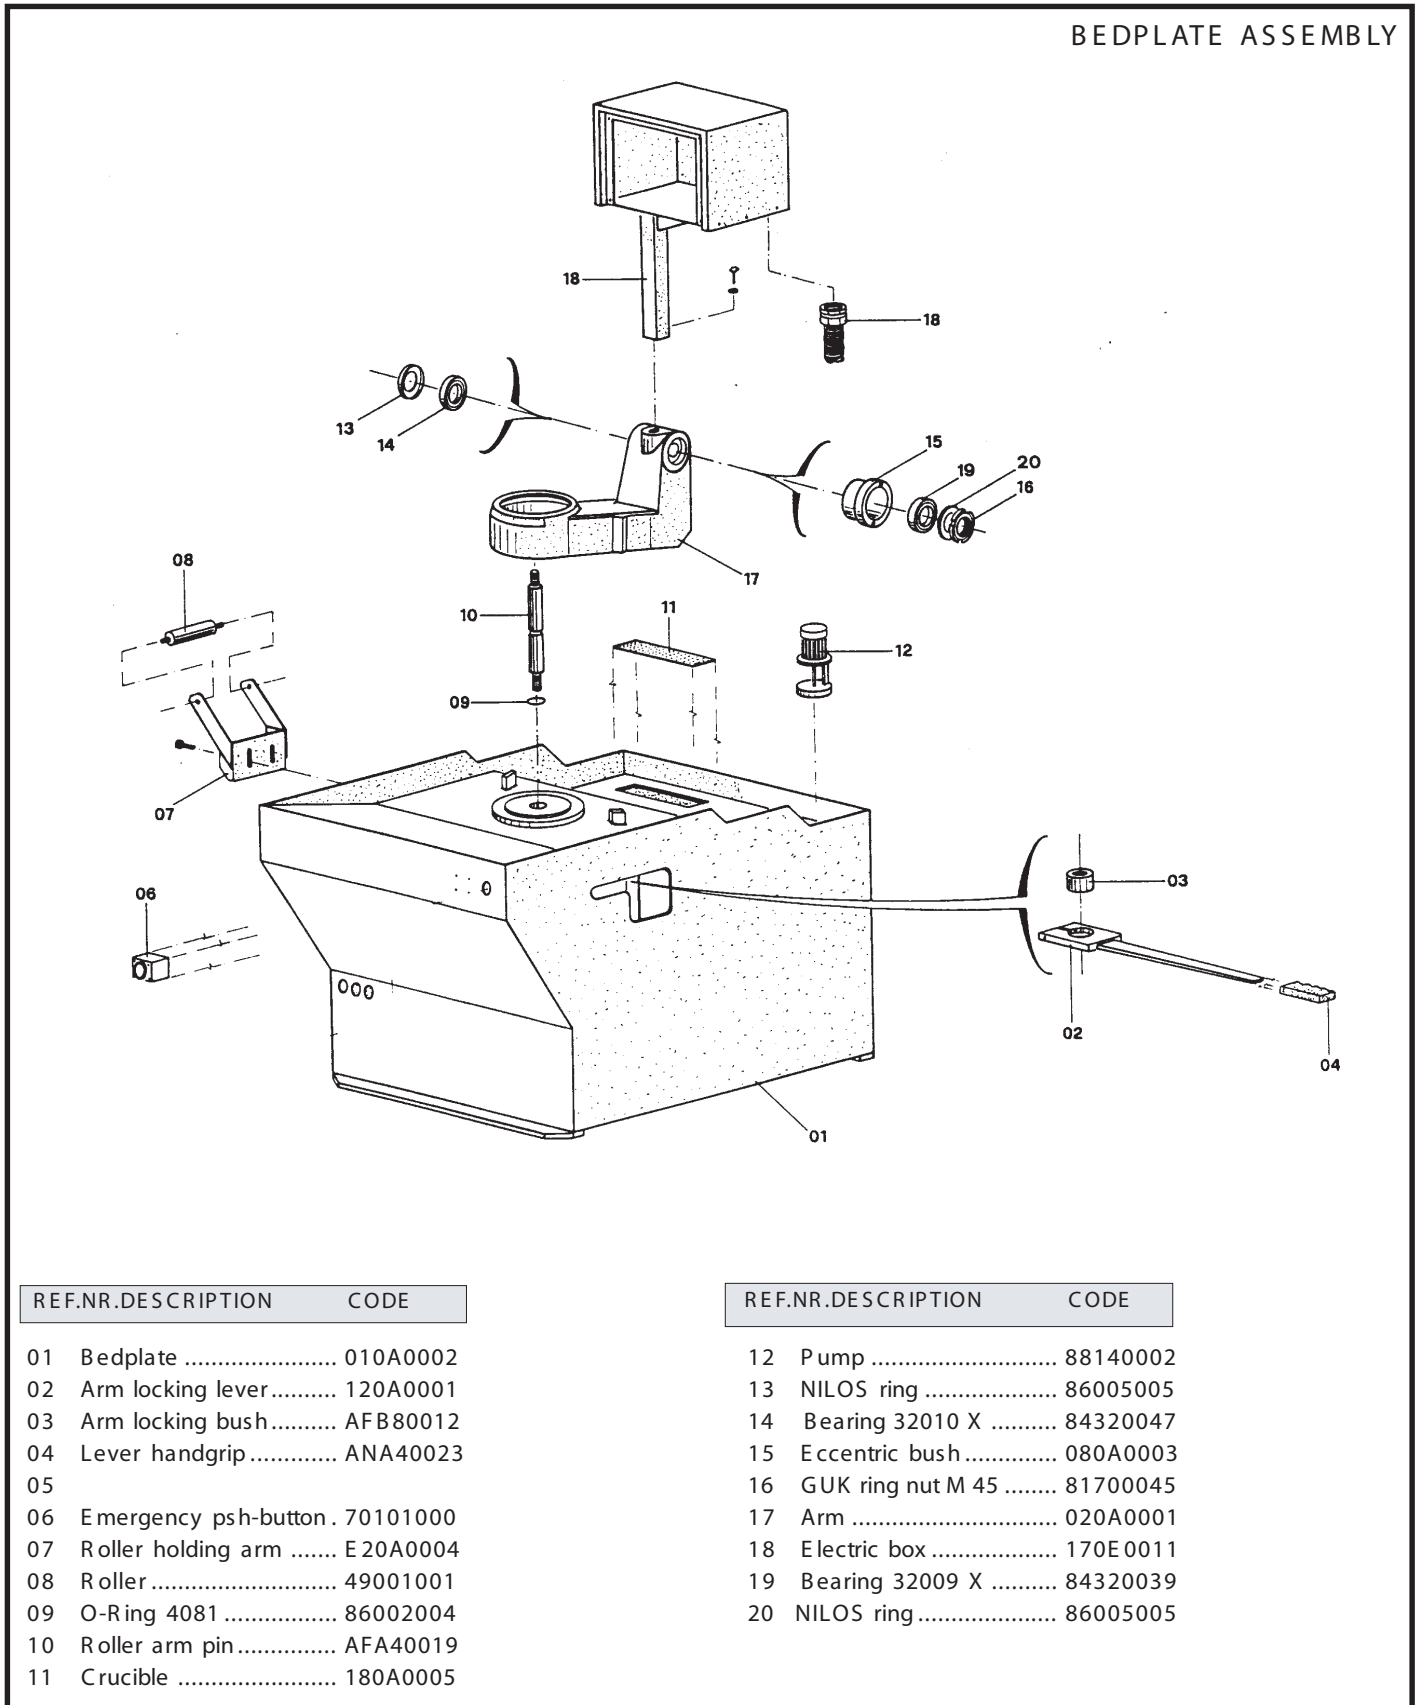

ELECTRICS COMPONENTS TRAD 350 ECO.

KEY

- 105 Auxiliry relay 72300000
- 106 Remote control switch 73401001
- 107 Fuse holder 73142005
- 108 Transforer 73327011
- 110 Cover gasket..... D80E0306
- 111 Cover included part. 116

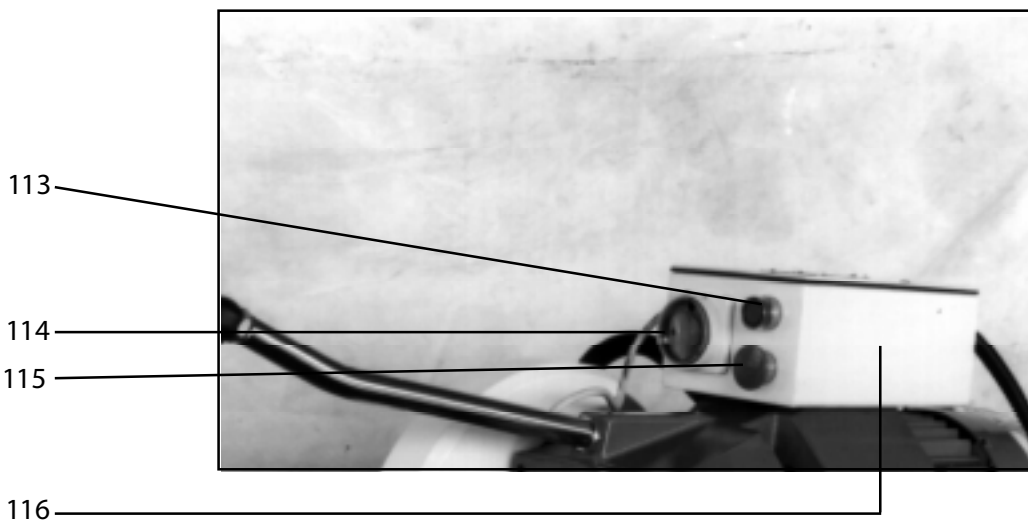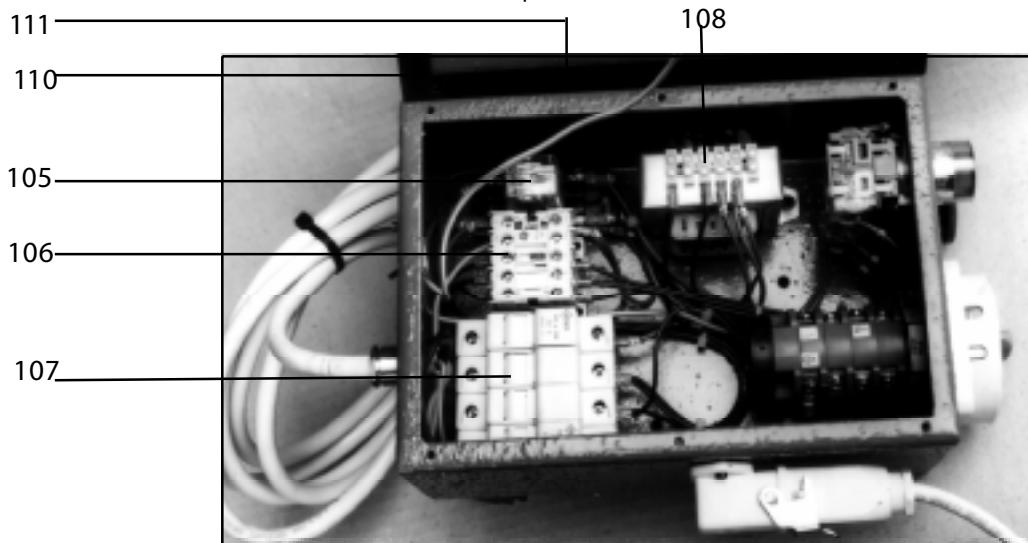


KEY

- 113 Reset push-button 70101000
- 114 Speed switch 70221018
- 115 Emergency push-button 70101000
- 116 Electric box D80E0305

KEY

- 405 Transformer 73327012
- 406 Remote control switch 73401001
- 407 Auxiliary relay 72300000
- 408 Fuse holder 73142005
- 409 Fuse holder 73142005
- 410 Terminal board 68303012

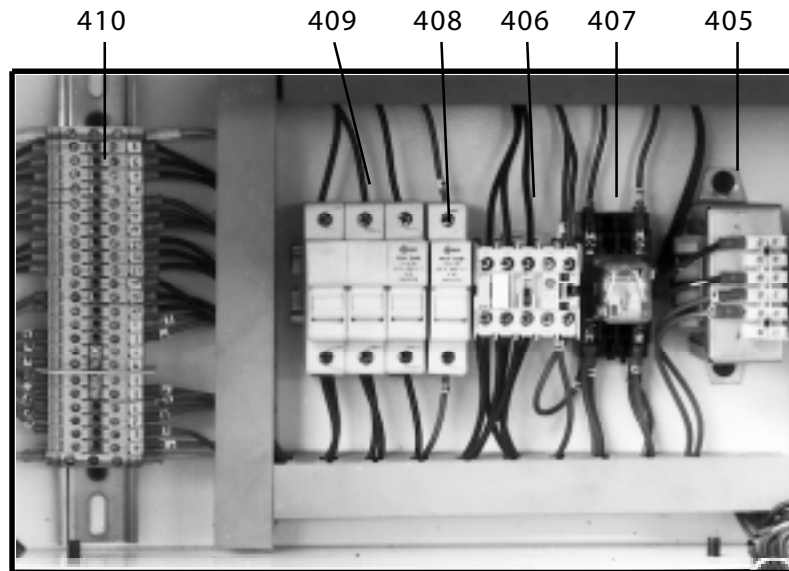

401


402

403

KEY


- 401 Main switch 70201001
- 402 Reset push-button 70101000
- 403 Speed switch 70201016

BRAKE ASSEMBLY

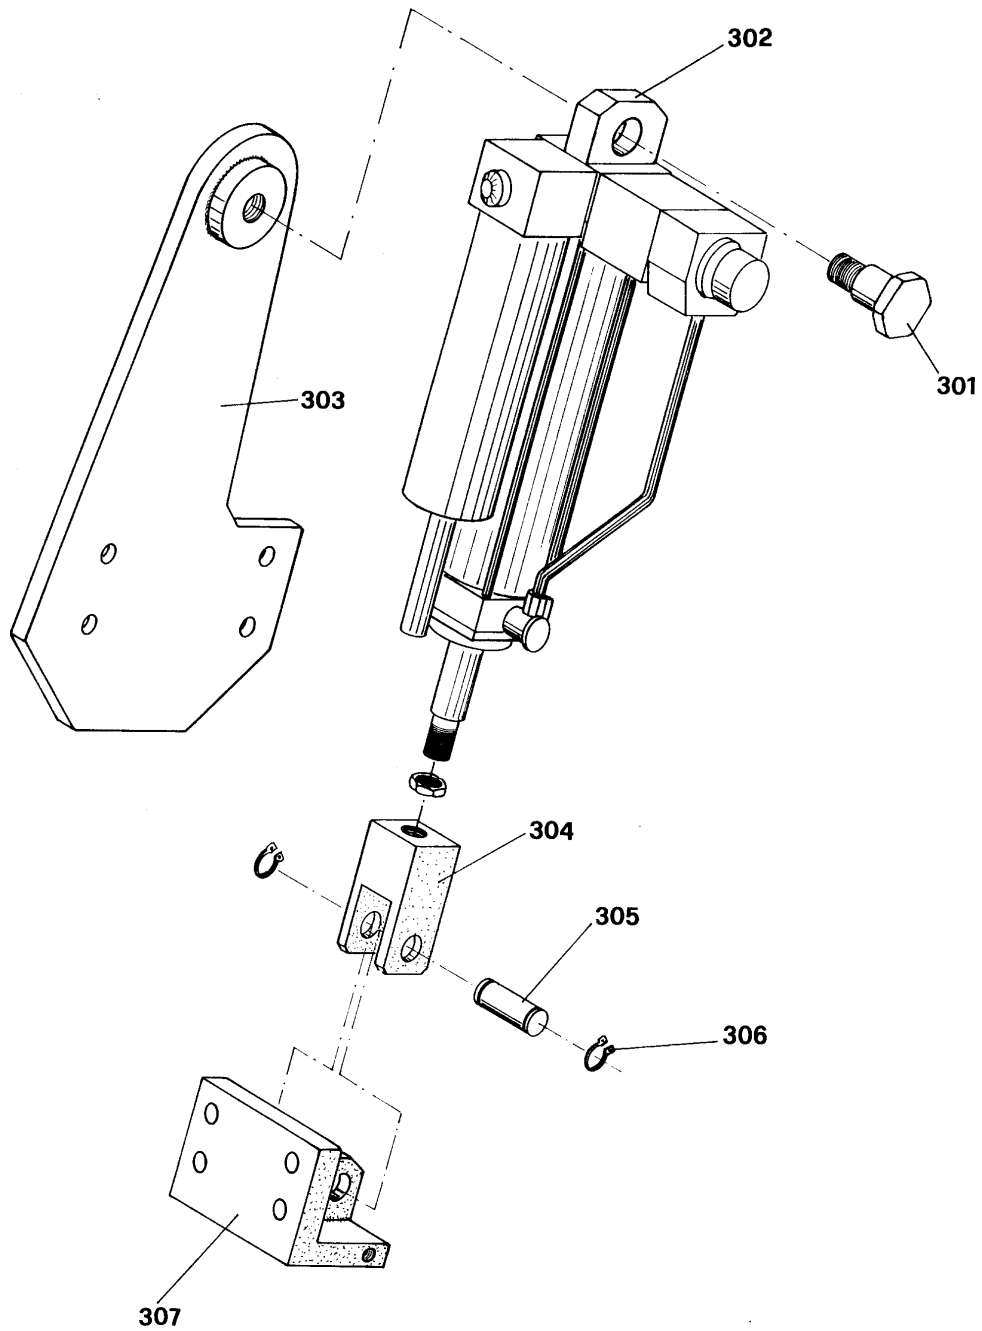

REF.NR.	DESCRIPTION	CODE
301	Cylinder articulation	AF750022
302	Electro-bake	78102005
303	Plate	110H0005
304	Cylinder fork	110H0004
305	Cylinder pin	AF880080
306	Seeger ring Ø 20	82600000
307	Cylinder bracket	110A0001

INCLINED VICE ASSEMBLY

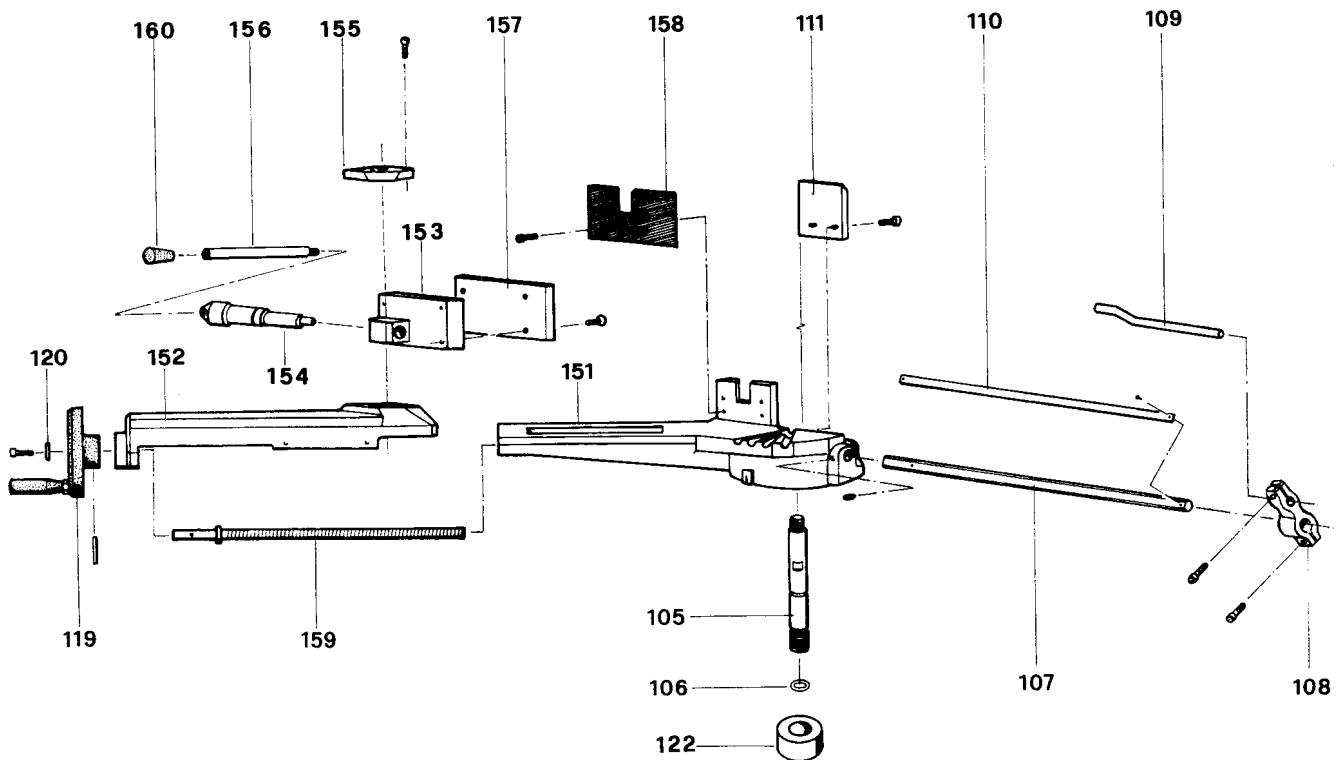

REF.NR.	DESCRIPTION	CODE
---------	-------------	------


105	Revolving arm lock.pin.	AFA40019
106	OR ring 4081	86002004
107	Bar stop rod	AFB80024
108	Bar stop body	AG660047
109	Bar stop push rod	AFC40109
110	Bar stop rod scale	AHB80026
111	Countervise r..h. jaw	AGA40037
119	Vice handwheel	44116418
120	Washer	82100000
122	Revol.arm lock. bushing	AFB80032

REF.NR.	DESCRIPTION	CODE
---------	-------------	------

151	Inclined countervise	AGA40007
152	Inclined vice	AGA40008
153	Quick lock support.....	AG750053
154	Locking cam	AF750055
155	Plate on vice	AF750056
156	Quick lock handle	AF750059
157	Inclined vice jaw	AFA40054
158	Inclined c.vice jaw	AFA40052
159	Inclined vice screw	AFA40057
160	Handgrip	44411512



STRAIGHT VICE ASSEMBLY

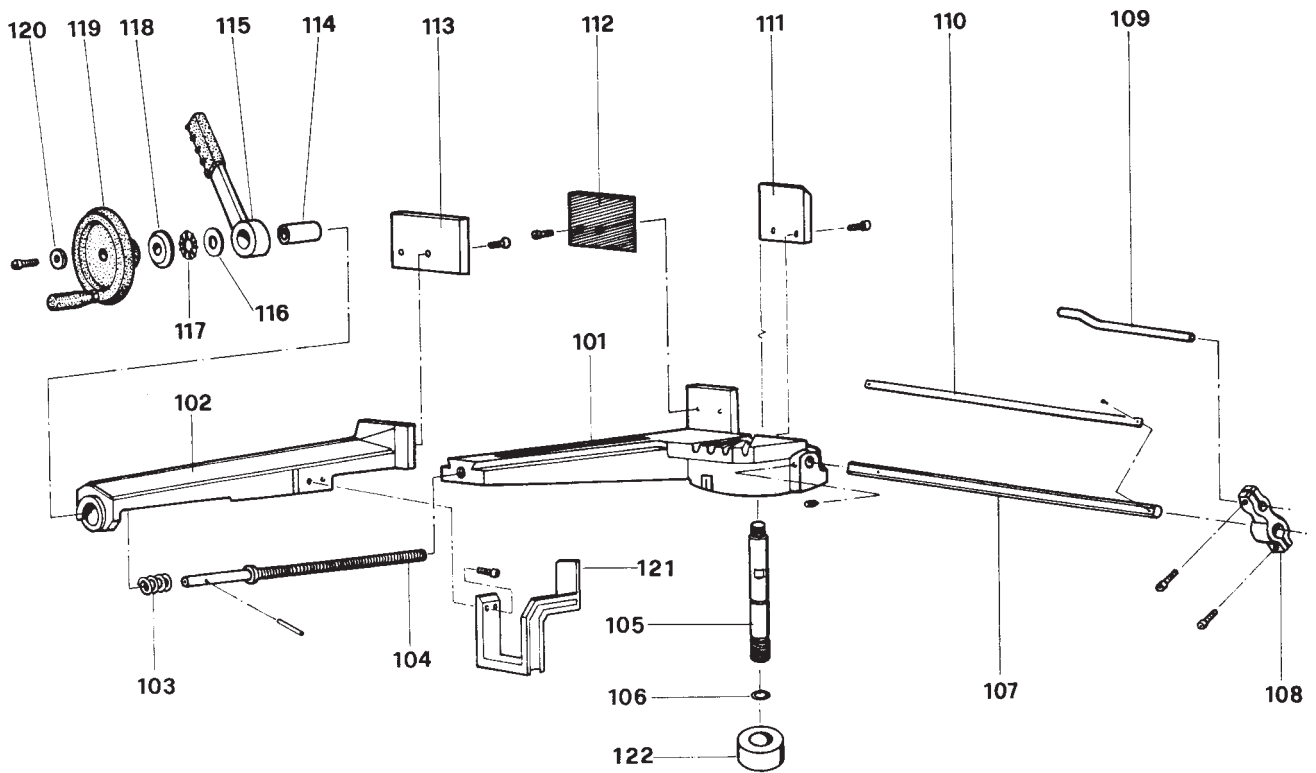

REF.NR.	DESCRIPTION	CODE
101	Straight countervise	AGA40070
102	Straight vice	AGA40071
103	Quick locking vice spring	AFB80035
104	Straight vice screw	AFA40091
105	Pin	AFA40019
106	OR ring 4081	86002004
107	Bar stop rod	AFB80024
108	Bar stop body	AG660047
109	Bar stop push rod	AFC40109
110	Bar stop rod scale	AHB80026
111	Countervise r.h. jaw	AGA40037

REF.NR.	DESCRIPTION	CODE
112	90° countervise jaw	AFA40074
113	90° vice jaw	AFA40072
114	Quick locking vice bush	AFB80032
115	Quick locking vice lever	AGB80031
116	Fifth wheel AX 30 47+	
117	Bearing CP 30 47	84500001
118	Washer	AFB80033
119	Vice handwheel	44116418
120	Washer	82100000
121	Anti-burr plate	AFA40076
122	Arm locking bushing	AFB80012

SAW-FRAME ASSEMBLY

