


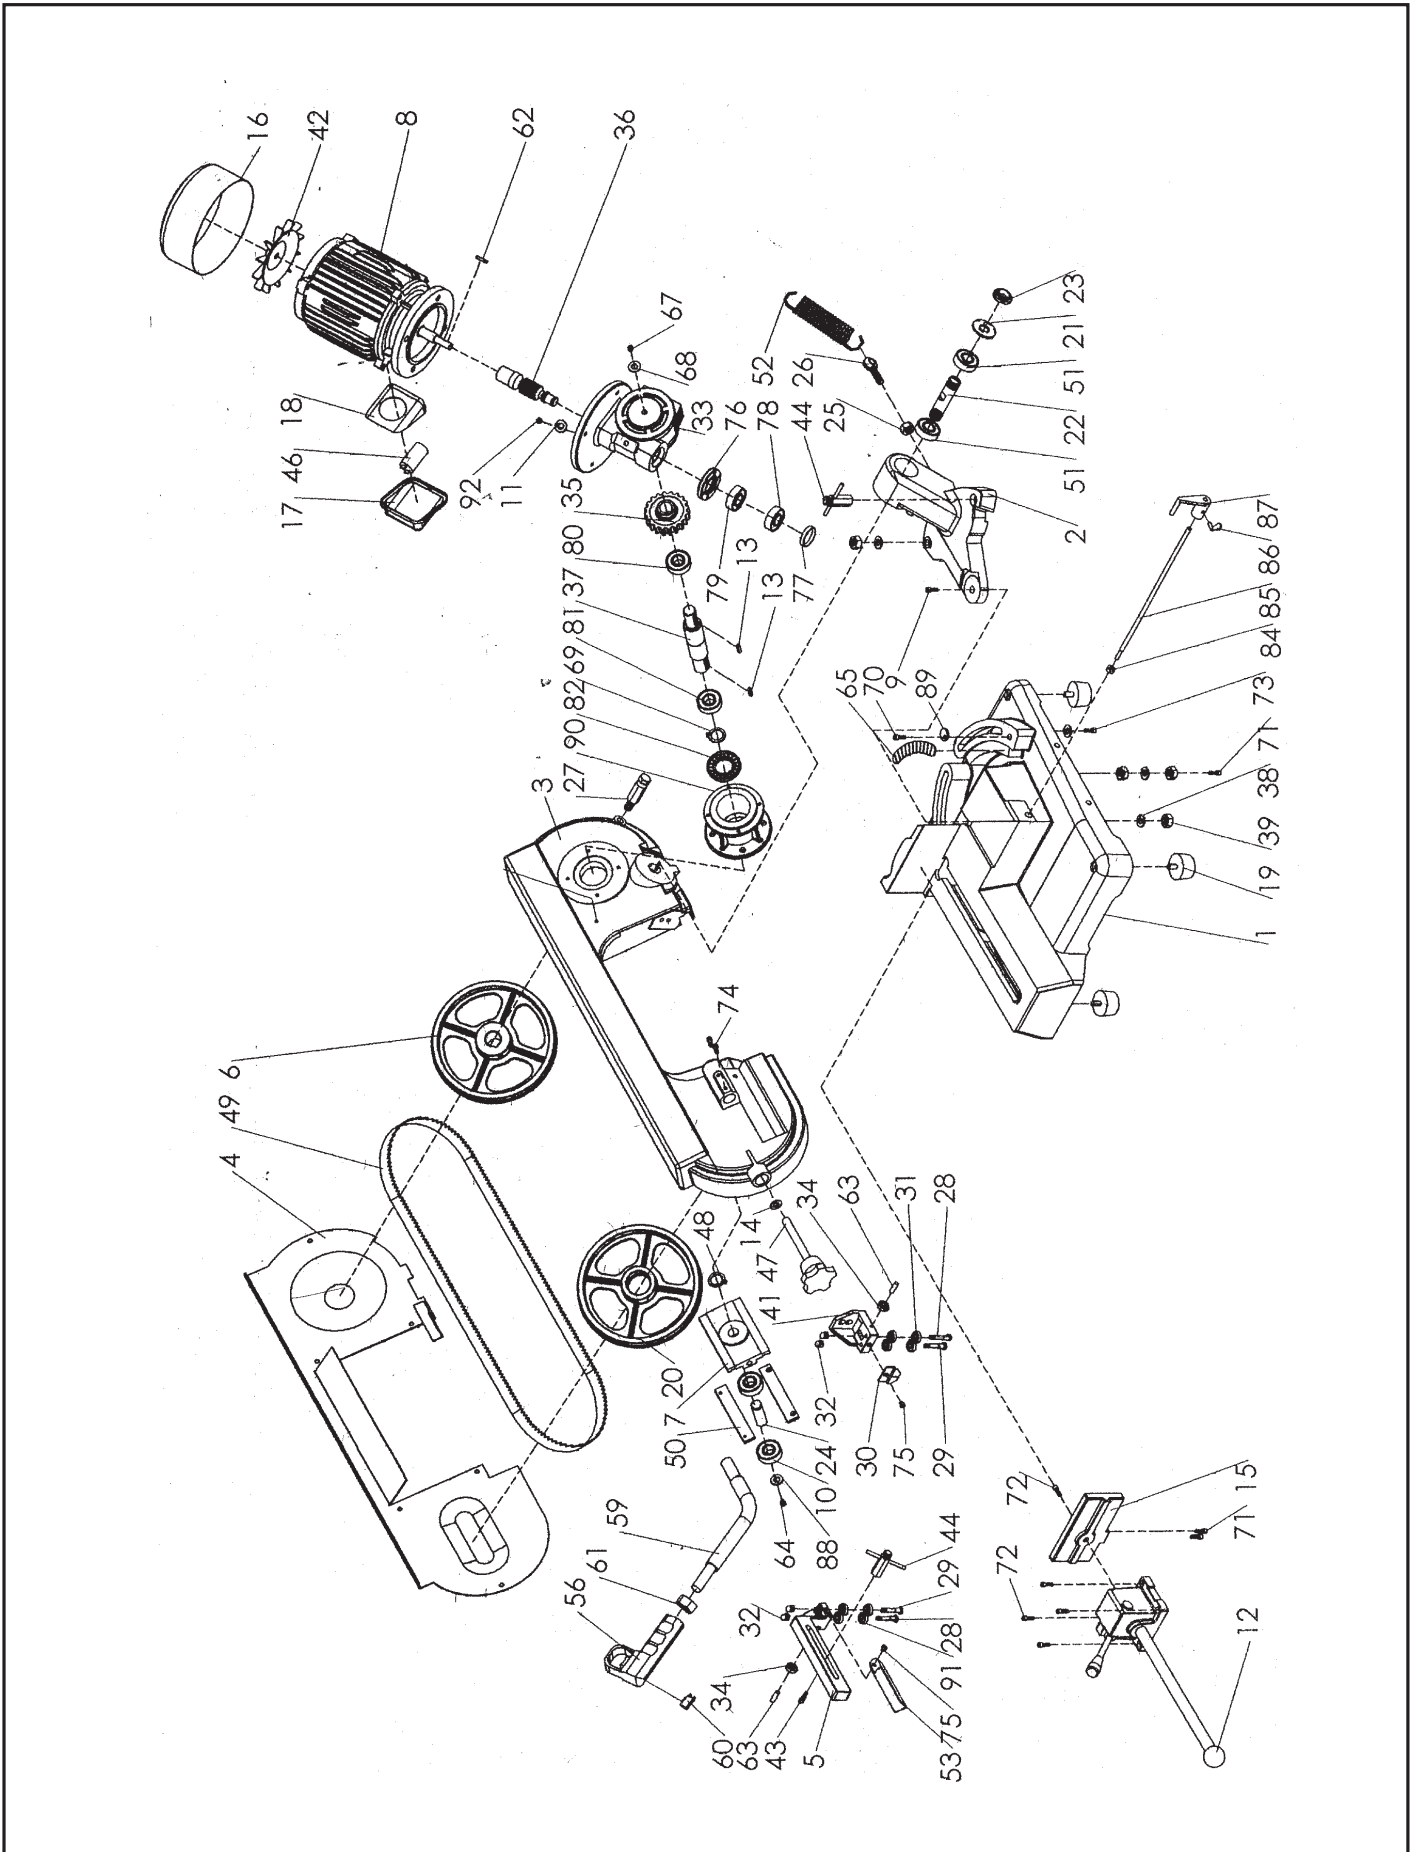

## 10 MACHINE COMPONENTS

### 10.1 - List of spare parts

REFERENCE N°	DESCRIPTION	REFERENCE N°	DESCRIPTION
1	Base	56	Handle
2	Revolving arm	57	
3	Saw frame	58	
4	Carter	59	Lever
5	Blade-guide rod	60	Micro switch
6	Motor flywheel	61	Nut
7	Blade tension plate	62	Key
8	Electric motor 1 ph	63	Pin
9	Pin	64	Screw
10	Bearing	65	Scale
11	Joint	66	
12	Handgripp	67	Screw
13	Key	68	Washer
14	Spring washer	69	Ring
15	Vice jaw	70	Screw
16	Fan cover	71	Screw
17		72	Screw
18	Joint	73	Screw
19	Pad	74	Screw
20	Return flywheel	75	Screw
21	Washer	76	Joint 25x37x7
22	Hinge pin	77	Joint
23	Nut	78	Bearing 6202
24	Return flywheel pin	79	Bearing 6805
25	Nut	80	Bearing 6006
26	Spring connection	81	Bearing 6006
27	Spring support rod	82	Joint 30x55x8
28	Fixed blade-guide pin	83	
29	Mobile blade-guide pin	84	Nut
30	Bearing guard	85	Bar stop rod
31	Bearing 607	86	Screw
32	Nut	87	Bar stop body
33	Reduction unit	88	Washer
34	Bearing	89	Eccentric washer
35	Transmission gear	90	Reductor flange
36	Worm gear	91	Bearing 607
37	Motor shaft	92	Screw
38	Washer		
39	Nut		
40			
41	Fixed blade-guide block		
42	Motor fan		
43	Screw		
44	Handle		
45			
46	Condenser		
47	Blade tension handwheel		
48	Spacer		
49	Blade		
50	Gib		
51	Bearing 32004		
52	Spring		
53	Mobile blade-guide protection		
54			
55			



### LEGENDA

- 222 Main switch
- 223 Disgiuntore

